

pandigital novel

User Guide



V1.0

Note: Your device style and features may differ from those documented in this User Guide.

UG-E_R60A200_v1.0_07-11

Table of Contents

Register your Device	11
Package Contents	11
Important Safety Precautions	12
Cleaning the device	14
Device Overview	15
Power Switch Usage	16
Touch-Screen Navigation	17
Reset Device	17
Getting Started.....	18
Connecting to Public Wi-Fi Hotspot	22
Application Menus.....	24
Applications	27
Buy & Download using Shop B&N.....	29
Buy & Download using BOOKSTORE	30
ADOBE® eBooks.....	31
ALARM	34
Add Alarm.....	34
Shut Off Alarm Alert	35
Edit Alarm.....	35
De-Activate Alarms	35
Delete Alarm	36

Barnes & Noble BOOKSTORE.....	36
Purchase an eBook.....	37
Purchase a Magazine or Newspaper	39
Get FREE Sample.....	41
Buy Sample Books	42
Search the Bookstore.....	42
SHOP B&N.....	43
Downloading Purchased Media	44
MY LIBRARY	44
Cover View	45
List View	47
Get Books	48
Manage Books	52
Lend/Return Books	53
Lend a Book	54
Check for Offers	55
Opening Borrowed Books	56
Return/Buy Borrowed Books.....	56
Bookshelves.....	57
Add New Bookshelf.....	57
Manage Bookshelf	58
Display Bookshelf.....	58
Quick Display a Bookshelf	59
Delete Bookshelf	59

Subscriptions.....	60
Copy Media from Computer	61
BROWSER.....	63
Go to a Web Site	63
Browser Navigation Menu	65
Add Bookmark to Web Page.....	65
View Bookmarked Web Pages.....	66
CALENDAR	66
View Other Months.....	67
Add Event.....	68
Edit Event.....	68
Snooze or Cancel Event Alert	68
CONTACTS.....	69
Add New Contacts	69
Edit Contacts	69
Delete Contacts.....	70
Send Email.....	70
DICTIONARY	71
Reader Dictionary	71
EMAIL	72
Setup New or Add Accounts	72
Set up Yahoo! Plus Account	74
Set up Juno Platinum or Turbo Account	75
Manual Setup	75

Email Inbox	75
Open Email Message	76
Compose New Email Message	76
Edit Email Account	77
Set Default Account	78
Delete Email Accounts	78
FILE MANAGER	79
View Internal Memory Contents	79
View microSD Card Contents	79
Import Media from microSD Card	80
Copy Specific Media Files into Internal Memory	80
Delete Media Files from Internal Memory	81
Rename Categories or Files	81
MUSIC	82
Play Music	82
Stop Music	84
Delete Audio Files	84
Playlist	85
Add songs to Playlist	85
Play songs in Playlist	85
Remove songs from Playlist	86

PHOTOS	86
Photo Gallery	87
Play Slideshow	88
Delete Photo Files	89
READER	90
Reader Function Menu	92
My Library	93
Dictionary	93
Table of Contents	94
Bookmarks	95
Bookmark a page	95
View Bookmark List	95
Highlight text on a Page	96
View Highlights List	96
Delete Highlights	97
Add Note to Page	97
View Notes List	98
Edit/Delete Notes	98
Go To	99
Font Size	100
Play Music in Background while Reading	100

SETTINGS.....	101
Settings → General	101
Settings → Date and Time	103
Settings → Barnes & Noble Account.....	104
Settings → Photos.....	106
Settings → Network.....	108
Turn Wi-Fi Off.....	110
Settings → Advanced Settings.....	110
Firmware Update.....	110
Restore to default.....	112
Restore to default and remove user information	112
Settings → Support	113
SUDOKU	113
USER GUIDE	114
Connect to Computer.....	115
Connect to Windows PC	116
Disconnect	117
Windows 7.....	118
Windows VISTA	118
Windows XP	119
Connect to Macintosh Computer.....	119
Disconnect	121
Frequently Asked Questions	122

Battery Management	133
Charge Battery	134
Technical Specifications.....	135
Limited Warranty	137
Disclaimers	139
License Agreement and Terms of Use	139
Customer Support	145



pandigital **novel**

A contemporary multimedia device designed for straightforward functionality, featuring an ePaper display and convenient hard-button and touch-screen navigation.

Your pandigital **novel** is a light and stylish electronic multimedia eReader which allows you to quickly and easily download and read digital printed material (eBooks, Magazines, and Newspapers) anytime and anywhere.

Also, you can view photo slideshows and listen to music through the built-in speakers or with headphones (*not included*).

When connected to a Wi-Fi network, you can download media files from your Barnes & Noble's online account, browse the web, visit your favorite social networking sites, and much more!

READ. SURF. PLAY.

Your `pandigital novel` is a step up in multimedia devices.

Congratulations on your choice!

Register your Device

To register your product or view the product warranty, please visit us at www.pandigital.net.

Package Contents

- `pandigital novel`
- USB Power Adapter
- Micro USB Cable
- Quick Start Guide
- User Guide (*pre-loaded in device*)

Important Safety Precautions

Always follow these basic safety precautions when using your **pandigital novel**. This reduces the risk of fire, electric shock, and injury.



Keep this device out of direct sunlight and heat sources such as in a closed car under sunlight or near a stove.



Do not use this device near water, in the rain or allow any liquid to get inside this product. Water and moisture may cause short-circuit to the electronic components and lead to malfunctions.



Do not drop or apply shock/vibration to this device. Strong impacts may damage the components inside. Do not lay heavy objects on the device as this could cause the screen to crack or break.



Do not use this device in dusty environments. Dust grains may cover this device and scratch the surface.



Do not use this device near strong electromagnetic sources, such as a microwave oven or television. The electromagnetic interference may cause this device to malfunction.



Do not attempt to disassemble or modify this device. There are no user serviceable parts inside this device, and unauthorized modifications void your warranty.



Do not insert objects other than compatible memory cards into the memory card slots of this device. The metal contacts inside the slots can easily become damaged by foreign objects.



Use only the USB power adapter with the micro USB cable included with this device. Using any other power adapter voids your warranty.

Protect the micro USB cable. Route cable so it is not likely to be walked on or pinched by items placed on or against it. Pay particular attention to the point where the cord attaches to your device

 
 


Protect the micro USB cable. Route cable so it is not likely to be walked on or pinched by items placed on or against it. Pay particular attention to the point where the cord attaches to your device.

Cleaning the device

 
Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.


Device Overview

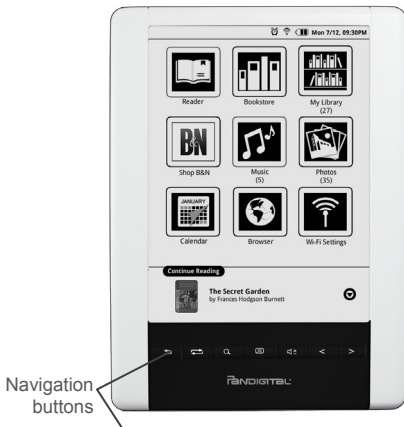

Power Switch Usage


Turn On: Slide and hold the power switch for up to 5 seconds, → wait as the device boots up and the **Application Menu** screen is displayed.

Turn Off: Slide and release the power switch quickly, → tap .

Turn Sleep Mode On/Off (energy saver): Slide & release the power switch quickly, → tap .

❖ *The device automatically enters Sleep mode if left idle in Screen Saver mode for 3 minutes.*

IMPORTANT: Do not leave the device in Sleep mode for more than 2 weeks as this may cause screen burn-in that cannot be recovered.

❖ *If you slide the power switch but don't want to put device into sleep mode or turn off, tap  to return to normal use.*

Touch-Screen Navigation

The touch-screen allows for quick, easy and convenient navigation for all applications.

Throughout the User Guide, you are instructed to use the following touch navigation methods:

Tap = touch and quick release of your finger on an item on the screen

Finger slide = touch & slide your finger across the screen, and then quick release (i.e., turning pages of your book)

Reset Device


In the event that your device “freezes” and does not respond to your touch, reset it by poking a straightened paperclip into the reset hole on the back of the unit. The device automatically restarts.



Getting Started

1. Charge Device

Use one of the following methods for charging your device.

USB Power Adapter: Insert the large end of the micro USB cable into the USB power adapter, plug the USB power adapter into an electrical wall outlet, and then connect the micro end of the micro USB cable to your device.

 
Direct connect with computer: Connect the large end of the micro USB cable to your computer, and the micro end to the micro USB port on your device. In order to use the device while the battery is charging, tap  when prompted to use the device as a mass storage.

While charging, the battery icon displays as: . When fully charged the battery icon displays as: .

❖ *You can use the device while the battery is charging.*



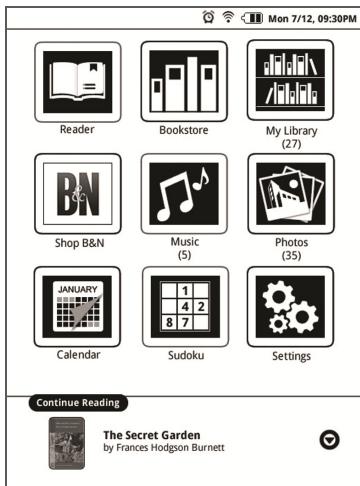

2. Turn Device On

Slide and hold the power switch for up to 5 seconds. Wait as the device boots up and the **Application Menu 1** screen is displayed.



3. Set Date and Time

IMPORTANT: In order to connect with your Barnes & Noble online account, the Date and Time must be set correctly according to your location.

1. Tap **Settings** on the **Application Menu** screen.
2. Tap **Date and Time**.
3. **Date** screen is displayed; tap on individual option fields and use   to change values.
4. Tap icons at top of screen to set **Time Zone** and **Time**.
 - ❖ *When setting time zone, press   to display next/previous pages.*





5. Tap  to save **Date/Time** settings.


4. Set up Wi-Fi Network


Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.




1. In the **Settings** screen, tap **Network**.
2. If your Wi-Fi status is off, tap **Turn ON**.
3. The device automatically scans and lists local Wi-Fi Networks found.

A  indicates secure networks that require login name/password to connect.

4. Tap the desired network to which you want to connect.
5. If applicable, enter the network **Password**.
The password is remembered for future connections.
6. Tap .

❖ *When connected, the Wi-Fi status icon  appears at the top of the screen.*

❖ *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Hidden networks** → enter the network name, type of Authentication and password → tap .*

- ❖ *To view or change any of the network settings, tap . If you make changes, tap  to save.*
- ❖ *To re-scan for local Wi-Fi networks, tap .*

Connecting to Public Wi-Fi Hotspot




If you are connecting via a public Wi-Fi hotspot, it may be necessary to immediately launch the browser and provide the hotspot login information prior to having an active internet connection.

1. Follow steps 1-6 above to select the hotspot Wi-Fi network.
2. On the **Application Menu** screen, tap **Browser**.
3. Enter the hotspot login information.

5. Set up Barnes & Noble Account

 
Your Barnes & Noble account must be set up on the device before you can download media into **My Library**.

1. In the **Settings** screen, tap **Barnes & Noble Account**.


2. If you have not yet registered an account with Barnes & Noble, tap **Create new account**. The browser launches and displays the Barnes & Noble account setup page. Follow the prompts to register your account.
3. Tap in the **B&N Account** field to display the Barnes & Noble Login entry box.
4. Enter the email address that is registered with your Barnes & Noble account, → tap .
5. Enter your password, → tap .
6. Tap **Login**.
7. The device logs into the Barnes & Noble server to verify your account information. If successful, the Barnes & Noble Account screen is displayed again.
8. Press  to return to previous screens.

Application Menus

 
When you turn the device on, the **Application Menu 1** screen is displayed.

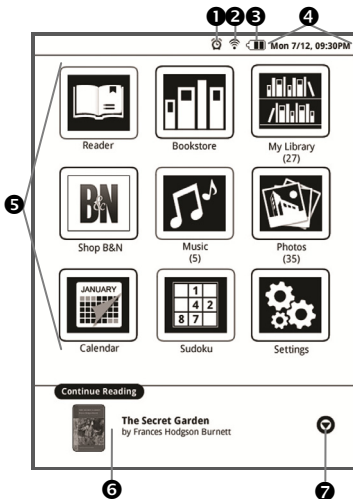


- ❶ Indicates Alarm is set/active
- ❷ Wi-Fi connection status
- ❸ Battery charge level
- ❹ Current Date & Time
- ❺ Application icons
- ❻ Last read media; tap to open
- ❼ Tap to display additional recently read media

- ❖ *Simply tap an application icon to launch the application.*
- ❖ *(#) under application title indicates number of files associated with the application.*
- ❖ *Press  to display **Application Menu 2**.*

Application Menu 2

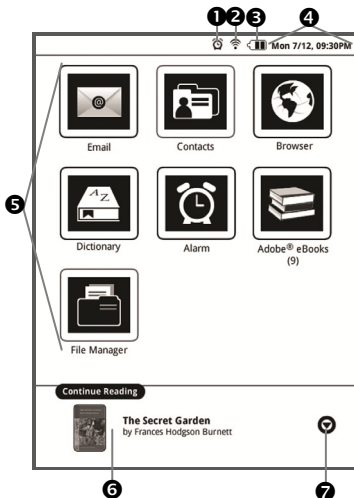

❖ Press  to return to **Application Menu 1**.

Applications



Adobe® eBooks

Read and manage eBooks copied from Adobe Digital Editions (ADE).



Alarm

Use as alarm clock with scheduled alarms.



Bookstore

Display Bestsellers, New Releases, Magazines and Newspapers from the Barnes & Noble online eBookstore.



Browser

Access the Internet and 'surf the web'.



Calendar

Display monthly calendar and schedule events.



Contacts

Create a list of personal contacts.



Dictionary

Look up words and definitions in the built-in dictionary.



Email

Send/Receive email using your existing email address.



File Manager

View, manage, and import media files in Internal Memory or on microSD card.



Music

Play and manage audio files.



My Library

Display eBooks, Magazines and Newspapers that you download to your device.



Photos

View and manage photo files.



Reader

Display your last read media file.



Settings

Manage device settings, connecting with Wi-Fi network, and personalizing your device.



Shop B&N




Shop the Barnes & Noble online eBookstore.



Sudoku

 


Play the popular number-placement game.

Buy & Download using Shop B&N

- A. On **Application Menu**, tap . Browser displays Barnes & Noble online eBookstore.
- B. Shop and purchase eBooks, Magazines, Newspapers, or get Free Samples.
- C. Confirm your purchase, enter your existing Barnes & Noble account login information (*email & password*) or create a new account, and then tap **Login**.
- D. The media is added to your Barnes & Noble **online Library**.
- E. Press  to return to the **Application Menu** screen.
- F. On the **Application Menu** screen, tap **My Library** → **Get Books**. If required, provide Barnes & Noble account login information.
- G. Wait for list of downloadable media. Select desired media to download, tap **Download Selected**.
- H. Press  to return to **My Library** screen.
- I. In **My Library** screen, tap on a media cover to open it in the **Reader**.

Buy & Download using BOOKSTORE



- A. On **Application Menu**, tap . Barnes & Noble Bestsellers and New Releases are displayed.
- B. Tap on book cover. Select **BUY NOW** or **Get Free Sample**.
- C. If you have not previously set up your Barnes & Noble account on the device, you are prompted to enter your Barnes & Noble account login information (*email & password*). *The login information is saved for future logins.*
- D. The media is added to your Barnes & Noble **online Library**.
- E. Press  to return to the **Application Menu** screen.
- F. On the **Application Menu** screen, tap **My Library** → **Get Books**. If required, provide Barnes & Noble account login information.
- G. Wait for list of downloadable media. Select desired media to download, tap **Download Selected**.
- H. Press  to return to **My Library** screen.
- I. In **My Library** screen, tap on a media cover to open it in the **Reader**.



ADOBE® eBooks

Adobe® eBooks is designed for reading and managing eBooks and other digital content transferred from Adobe Digital Editions (ADE).

To view Adobe® eBooks, you need a free Adobe account and Adobe Digital Editions software. Register your account and then download the software on the Adobe website:

<http://www.adobe.com/products/digitaleditions>

Authorize your pandigital novel for ADE

1. Start ADE on your computer.
2. Connect your **pandigital novel** to your computer using the USB cable.
3. ADE detects your **pandigital novel** and displays the **Device Setup Assistant**.
4. Click **Authorize Device**, → click **Finished**.

After you authorize your **pandigital**

novel, it appears as a device in ADE (titled **PD_NOVEL**).

Transfer eBooks from ADE into your **pandigital novel**




1. With your **pandigital novel** still connected to the computer, drag and drop the eBooks from the ADE collection into your **pandigital novel** device (titled **PD_NOVEL**).
2. Disconnect the USB cable from device.

Read Adobe® eBooks

1. Tap **Adobe® eBooks** on the **Application Menu** screen.
 2. The books you transferred to **PD_NOVEL** are listed.
 3. Tap on a book cover to open in the Reader.
- ❖ *If you attempt to open a book but an error message states the book cannot be opened, it may be an expired book or the activation record has been erased. Re-start your device and then re-connect to the computer to re-activate the authorization.*


- ❖ *If an Adobe eBook has an expiration date, it also expires on your device. If an eBook is returned in ADE before it expires, the next time you connect your device to your computer, ADE updates the status of the returned eBook on your device, and you won't be able to read it.*

Delete Adobe® eBooks




1. Tap **File Manager** on the **Application Menu** screen.
2. Tap the **Digital Editions** category.
3. Press  to display the option menu, → tap **DeleteMode**.
4. Tap on the files you want to delete, → tap **OK**.
5. Tap  to confirm deletion.
6. Press  to return to previous screens.




ALARM

❖ An alarm icon  displayed at the top of screens indicates that one or more alarms have been set and are active.


Add Alarm

1. Tap **Alarm** on the **Application Menu** screen.
2. Tap **Add Alarm**.
3. Tap in the **Label** entry field to enter the desired descriptive label for the alert (*i.e.*, *Lunch with friend*).
4. Tap in the **Time** entry field to enter the time.
5. If you want the alarm to alert repeatedly on specific days, tap  next to the desired days.
6. Tap **Save**.
7. In the Alarm screen, tap  next to the alarm to activate it.
8. Tap **Save**.
9. The alarm icon  appears at the top of the screen

10. Press  to return to the **Application Menu** screen.

Shut Off Alarm Alert

When a scheduled alarm is activated, an alert appears on the screen with the alarm information.



Tap on the alert message to stop it, → tap  to close the alert message.

Edit Alarm

1. In the **Alarm** screen, tap on the alarm you want to edit.
2. Make desired edits → tap **Save**.

De-Activate Alarms

You may have instances where you want to temporarily de-activate alarms rather than delete them.

1. In the **Alarm** screen, tap  next to the alarm(s) you want to de-activate.
2. Tap  when you want to re-activate.

Delete Alarm

1. In the **Alarm** screen, tap on the alarm you want to delete.
2. In the **Edit Alarm** screen, tap **Delete**.



Barnes & Noble BOOKSTORE

❖ *You must be connected to a Wi-Fi network in order to connect to Barnes & Noble.*

 
Tap **Bookstore** on the **Application Menu** screen. The device connects and syncs with the Barnes & Noble online eBookstore and displays the Bestsellers and New Releases on the **Bookstore** screen.



- ❖ If desired, tap **List View** to change the display layout to a text list.
- ❖ Press **>** **<** to display next and previous pages.

Purchase an eBook

1. In the **Bookstore** screen, tap on a **book** cover to display the descriptive information, synopsis, **Buy Now** and **Get Sample** buttons.

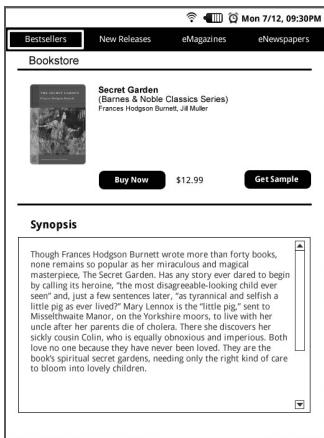

Press  to return to the **Bookstore** screen

2. Tap **BUY NOW**, → tap **OK** in the confirmation screen; the book is added to your Barnes & Noble online account.
3. After a book is added to your Barnes & Noble account, use **Get Books** to download it from your Barnes & Noble account into your pandigital **novel** (pg. 48).

4. After downloading the book, tap on a book cover in **My Library** to open it in the **Reader**.
- ❖ *Most books include a **Table of Contents** with active chapter links allowing you to simply tap the desired chapter/page that you want to view. However, **sample** books' Table of Contents may not have active links; use **Reader** → **Go To** to jump to a desired page in a sample book.*

Purchase a Magazine or Newspaper

1. In the **Bookstore – Bestsellers** screen, tap on **eMagazines** or **eNewspapers** to display only same media type.
2. Tap on a publication cover to display the descriptive information, synopsis, and buy buttons (*sample below*).

Bestsellers New Releases **eMagazines** eNewspapers

Bookstore | eMagazines

Weddings
PD Media

Buy Current Issue \$2.49 **Subscribe Now** \$1.49 Per Month

Synopsis Rating: 4

Weddings Magazine has an enviable reputation in the wedding industry for creating the platforms for wedding specialists to showcase their products and services while offering prospective brides and grooms a multitude of choices, ideas and alternatives for planning their wedding.

Weddings magazine was first published in 1998.

Weddings Magazine is designed to assist prospective brides with choosing wedding services and offer informative, practical editorial content on topics ranging from wedding planning to home decorating and women's health issues.

Press  to return to the **Bookstore** screen.

3. Tap **Buy Current Issue** to purchase only the displayed issue.
OR
Tap **Subscribe Now** to order a monthly subscription.
4. Tap **OK** in the confirmation screen; the periodical is added to your Barnes & Noble online account.

5. After a periodical is added to your Barnes & Noble account, use the **Get Books** feature to download it from your Barnes & Noble account into your `pandigital novel` (pg. 48).
6. After downloading the periodical using **Get Books**, tap on the cover in **My Library** to open it in the **Reader**.

Get FREE Sample



Some, but not all, books offer a downloadable sample for you to read before purchasing the book.

1. When offered in the Descriptive/Synopsis window, tap **Get Sample**; the sample book is added to your Barnes & Noble online account.
2. After the sample is added to your Barnes & Noble account, use **Get Books** to download it from your Barnes & Noble account into your `pandigital novel` (pg. 48).
3. After it's downloaded, tap on the sample cover in **My Library** to open it in the **Reader**.

- ❖ *Some samples' Table of Contents may not have active links; use **Reader** → **Go To** to jump to a desired page in a sample book/periodical.*



Buy Sample Books

You can quickly and easily buy the full version of a sample book in your Barnes & Noble online Library.

1. In the **My Library** screen, tap **Lend/Return**.
2. Tap **Buy sample books**.
3. Tap  next to the sample book(s) you want to buy, → tap **Buy Now**.
4. Tap  to confirm purchase. The sample book is added to your Barnes & Noble online download library.
5. Use **Get Books** to download your purchased book (pg. 48).

Search the Bookstore

You can search for a specific string of text (*i.e., title, author name, etc.*) within the media files in the Bookstore.

1. In the **Bookstore** screen, if desired, first select one of the media categories: Bestsellers, new Releases, eMagazines or eNewspapers.
2. Press .
3. Enter the string of text, → tap .
4. Media with matching text is listed; tap on a media listing to display media information.
5. Follow previous instructions for purchasing media or getting free samples.



SHOP B&N

IMPORTANT: In order to connect with your Barnes & Noble online account, the Date and Time must be set correctly according to your location.

Shopping directly on the Barnes & Noble website allows you to view full details about a book, including Editorial and Customer Reviews, along with the synopsis.

Tap **Shop B&N** on the **Application Menu** to log onto the Barnes & Noble online eBookstore.

Downloading Purchased Media

After purchasing media through the Barnes & Noble bookstore, use **Get Books** to download them from your Barnes & Noble online download library into your *pandigital novel* (pg. 48).

MY LIBRARY

 
Tap **My Library** on the **Application Menu** screen to view and manage your media.

The following methods can be used to add eBooks, Magazines and Newspapers to the device:

- Download media from Barnes & Noble via **Get Books** function
- Import media files from a SD card
- Copy media files from your computer via microUSB (



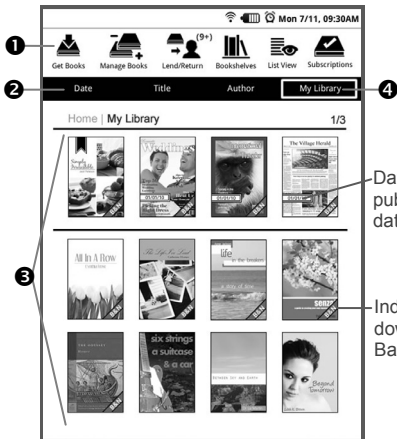

Cover View



❶ Function Menu

❷ Media is sorted by **Date** of download. If desired, tap **Title** to sort by media title, or **Author** to sort by author's first name.

- ③ Media that has been loaded into your device.
- ❖ *Press the   buttons to display next/previous pages.*
- ④ Tap to view other Bookshelves (use **Bookshelves** to create other bookshelves).
- ❖ *Simply tap on any media cover to open and display it in the **Reader**.*
 - ❖ *To access Adobe books, use the **Adobe® eBooks** application on the **Application Menu** screen.*



List View



- 1 Function Menu
- 2 Media is sorted by **Date** of download. If desired, tap **Title** to sort by media title, or **Author** to sort by author's first name.
- 3 Media that has been loaded into your device.

❖ Press the   buttons to display next/previous pages.

④ Tap to view other Bookshelves (use **Bookshelves** to create other bookshelves).

❖ Simply tap on any book listing to open and display it in the **Reader**.

❖ To access Adobe books, use the **Adobe® eBooks** application on the **Application Menu** screen.



Get Books




Use **Get Books** to download the downloadable eBooks, Magazines and Newspapers from your Barnes & Noble online account into your **pandigital novel**.

You must have an online account with Barnes & Noble, and already purchased media or requested free book samples.

IMPORTANT: In order to connect with your Barnes & Noble online account, the Date and Time must be set correctly according to your location.

- ❖ *eBooks downloaded from Barnes & Noble to a Macintosh computer are saved in an unsupported .pdb format. If you copy the .pdb formatted eBooks into your **pandigital novel**, they will not be recognized. You should always use **Get Books** to download eBooks directly from your Barnes & Noble download library into your **pandigital novel**. Books that are only available in .pdb format are not downloadable even when you use **Get Books**.*
- ❖ *Each time you use **Get Books**, the device syncs with your Barnes & Noble online account and updates “last page read” markers, which exist in books that you have been reading, in both your device and online account. This allows you to download and open the same books in different eReaders at the “last page read” location instead of the beginning of the book.*





1. Make sure your device is connected to a Wi-Fi network.
2. In the **My Library** screen, tap **Get Books**.
3. If you have not yet set up your Barnes & Noble account on the device, you are prompted for your Barnes & Noble login information. Tap in each entry field to enter your login information, → tap **Login**.
 - ❖ *If you have not yet registered an account with Barnes & Noble, you can do so now by tapping **Settings** on the **Application Menu**, → tap **Barnes & Noble Account**, → tap **Create new account**. The browser launches and displays the Barnes & Noble account setup page. Follow the prompts to register your account.*
4. Wait for the list of your downloadable media to be displayed, which could take up to a minute depending on how many items are in your account.
 - ❖ *Media you've archived are labeled "Archived", but they can be downloaded just as all other media. The media remains labeled "Archived" in **My Library**.*

5. To download specific items, tap on the items you want to download now, → tap **Download Selected**.
To download all purchased media, tap Select All, → tap **Download Selected**.
- ❖ Press   to display next/previous pages.
6. The media is downloaded and added to **My Library**.
- ❖ *In the Downloading media message:*
S:## = number of successful downloads
F:## = number of failed downloads
T:## = total number of media files to be downloaded
7. When the download is finished, press  to return to **My Library** screen.
8. The first time you tap on the downloaded media in **My Library** to open it, you may be presented with an 'unlock' message requiring you to provide your credit card name and number that is registered with your Barnes & Noble account.



Manage Books

Use **Manage Books** to delete media from **My Library**.

1. In the **My Library** screen, tap **Manage Books** to display the list of media you have downloaded or imported into **My Library**.
 - ❖ Press   to display next/previous pages.
 - ❖ Media is sorted by **Date** of download; if desired, tap **Title** or **Author** to re-sort your media accordingly.
2. Tap on the media you want to delete, → tap **Delete Selected**.
3. Tap  to confirm the deletion.
4. Press  to return to **My Library** screen.



Lend/Return Books


There are some books that Barnes & Noble classifies as “*lendable*”, which allows you to loan them to others who also have a Barnes & Noble account.



- ❖ *You must be connected to a Wi-Fi network before you can use the Lend/Return Books function.*
- ❖ *A number appearing with the Lend/Return icon indicates new/pending activity. This number gets updated each time the device syncs with your Barnes & Noble account (i.e., Get Books, check Subscriptions, Lend/Return).*
- ❖ *After launching **Lend/Return**, a **Lend/Return/Buy** window displays the lend/return/buy options. The number behind **Return borrowed books** indicates books that need to be returned. The number behind **Check for offers** indicates new offers pending.*

Please be aware of the following considerations before loaning or borrowing any books:

- To lend a book, the recipient must have a Barnes & Noble account.
- To download a borrowed book, you must have a credit card number assigned to your Barnes & Noble account.
- To unlock and open a borrowed book, you may be required to provide the default credit card name and number that is registered with your Barnes & Noble account.
- The book can only be loaned for 14 days.
- Only one copy of a book can be read at a time. Therefore, the lender won't have access to the book until after it has been returned from the recipient.

Lend a Book


1. In the **My Library** screen, tap **Lend/Return**.
2. Tap **Lend books**.
3. Tap  next to a book that you want to lend, → tap **Lend**.
4. Enter the email address of your recipient.

5. If desired, tap in the message window to enter a personal message to accompany the book.
6. Tap **Lend**.
7. Tap  when book loan is complete.
8. Press  to return to previous screens.

Once you send a loan offer, the book is no longer available in **My Library** until the recipient returns the book or rejects the offer. You can use **Get Books** to download the book when the book becomes downloadable again in the future (*pg. 48*).

Check for Offers

Use this function to check for book loan offers made to you.

1. In the **My Library** screen, tap **Lend/Return**.
2. Tap **Check for offers**.
3. Tap  next to the offers you want to accept or decline, tap → **Accept** or **Decline** accordingly.


4. Press  to return to previous screens.

Opening Borrowed Books

After accepting a book offer, use **Get Books** to download the loaned book to **My Library** (pg. 48).

To unlock and open the book for the first time, you may need to provide the default credit card name and number that is registered with your Barnes & Noble account.

Return/Buy Borrowed Books

1. In the **My Library** screen, tap **Lend/Return**.
2. Tap **Return/Buy borrowed books**.
3. Tap on desired book, → tap **Return** or **Buy Now** as desired.
4. Press  to return to previous screens.

Returned books: Status is changed to “Returned” but remains available for purchase later.

Purchased books: The borrowed book is removed from **My Library**. Use **Get Books** to download your purchased book (pg. 48).



Bookshelves

Use **Bookshelves** to create and manage personalized bookshelves into which you want to save your downloaded media (*i.e.*, *Short Stories*, *Drama*, *etc.*).


❖ *The number of books within a bookshelf is displayed in the right column.*

Add New Bookshelf

1. In the **My Library** screen, tap **Bookshelves**.
2. Tap **Add Shelf**.
3. Enter the desired bookshelf name (*i.e.*, *Short Stories*, *Drama*, *etc.*).
4. Tap **Save** to create the new bookshelf.

Manage Bookshelf



Add media to bookshelf:

1. In the **My Library** screen, tap **Bookshelves**.
2. Tap on the bookshelf that you want to add or remove media, → tap **Manage Bookshelf**.
3. Media is sorted by **Title**; if desired, tap **Date** or **Author** to re-sort your media accordingly.
4. Tap on the media you want to add to the bookshelf.
5. Tap **Save**, and then **OK** to confirm the save.
6. Press  to return to **My Library** screen.

Display Bookshelf

1. In the **My Library** screen, tap **Bookshelves**.

2. Tap on the bookshelf you want to display,
→ tap **Display Shelf**.

❖ Press   to display next/previous pages.

3. Tap on a book cover to open it in the
Reader.

Quick Display a Bookshelf


In **My Library** or in any other bookshelf, tap the bookshelf name in the upper right corner to display the list of all bookshelves, → tap the desired bookshelf to open.

Delete Bookshelf

1. In the **My Library** screen, tap
Bookshelves.
2. Tap **Delete Bookshelf**.
3. Tap on the bookshelf you want to delete,
→ tap **Delete Selected**.

❖ **Note:** *You cannot delete **My Library**.*

4. Tap **OK** to confirm deletion.

5. Press  to return to **My Library** screen.




Subscriptions

Use **Subscriptions** to check for newest issues of active periodicals (*Magazine or Newspaper*) subscriptions.

To get non-active subscriptions and purchased single issues, use **Get Books** (pg. 48).

- ❖ *Each time you use **Subscriptions**, the device syncs with your Barnes & Noble online account and updates “last page read” markers, which exist in publications that you have been reading, in both your device and online account. This allows you to download and open the same publications in different eReaders at the “last page read” location instead of the beginning of the publication.*
- ❖ *You must be connected to a Wi-Fi network before you can perform the **Check Subscriptions** function.*

1. In the **My Library** screen, tap **Subscriptions**.

2. If you haven't yet registered your Barnes & Noble account in the device, you are prompted for your Barnes & Noble login information. Tap in each entry field to enter your login information, → tap **Login**.
3. The device syncs with your Barnes & Noble online account.
4. If new releases or updates are found, they are reflected in **My Library**, otherwise a message advises there are no updates, → tap  to acknowledge.

Copy Media from Computer

If you've downloaded purchased Barnes & Noble media from your online account to your computer, it is highly recommended that you copy the media files into your **pandigital novel** via USB connection rather than using the File Manager in the device.

❖ *You can use either File Manager or computer connection to copy **free** books into the device.*

1. Connect your **pandigital novel** to your computer via microUSB cable (see *pg. 115*).
2. Copy **purchased** media files into the following folders under **PD_NOVEL**:
/eBooks/BNDownloads/books
/eBooks/BNDownloads/magazines
/eBooks/BNDownloads/newspapers
or
Copy **free** eBooks into the */eBooks* folder.
3. Disconnect the microUSB cable.
4. Tap **My Library** on the **Application Menu** screen.
5. When you tap on a media title to open it, in order to unlock the file, you are prompted for the credit card holder's name and credit card number used to purchase the book.
6. After providing the correct credit card information, the media is unlocked and opens in the **Reader**.



 
BROWSER



Use **Web** to access the Internet and 'surf the web' and visit your favorite web sites.

❖ *Using **Web** requires a connection to a Wi-Fi network. If you have not set up your Wi-Fi network, do so now using the instructions on page 108.*



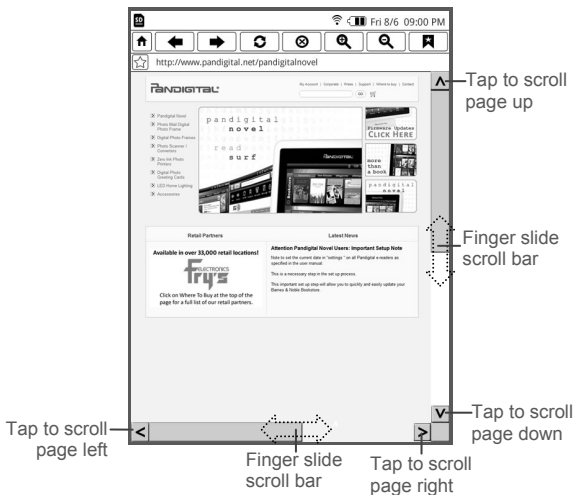






Go to a Web Site

1. Tap **Browser** on the **Application Menu** screen to launch the internet browser.





2. Tap in the top URL address field; the keypad appears so you can enter the web site address.
3. Tap  to go to the web site address.
4. Press  to exit the browser.


Browser Navigation Menu

	Return to Home website
	Tap to bookmark web page
	Display previously viewed web page
	Return to web page viewed before selecting Back
	Refresh the screen by reloading the web page
	Stop web page from loading
	Zoom in on the web page
	Zoom web page back out
	List of bookmarked web pages





Add Bookmark to Web Page

1. To bookmark a web page, tap the  in the upper left corner of the screen.
2. Tap  to confirm the addition.

3. When the keypad appears, enter the URL address, → tap .



 
View Bookmarked Web Pages

1. To view a list of all bookmarked web pages, tap .
2. To display a bookmarked web page, tap directly on a listing.
3. To delete one bookmark, tap  next to a listing, → tap **Delete**.
To delete all bookmarks, tap **Select All**, → tap **Delete**.






CALENDAR

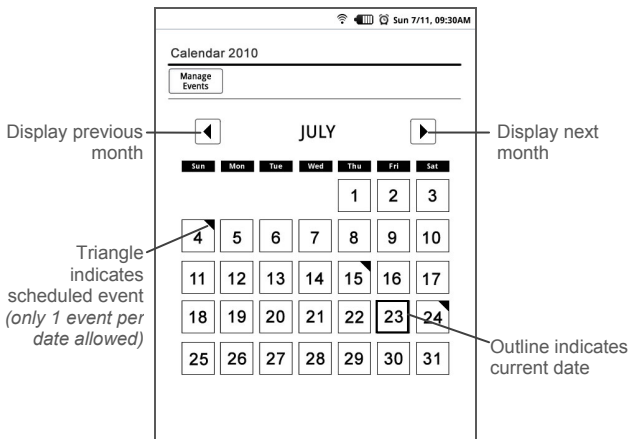Tap **Calendar** on the **Application Menu** screen to display the **Calendar** screen.




View Other Months


1. On the **Calendar** screen, tap  to view previous months, or  to view future months.
2. Press  to exit the **Calendar** screen.

Add Event

❖ *Only one event per date is allowed. If you add an event on a date with existing event, the new event replaces the first.*

1. On the **Calendar** screen, tap on the date to which you want to add an event.
2. In the **Add Event** screen, tap in each entry field to enter the desired event information → tap **Save**.
3. Press  to return to the **Calendar** screen.

Edit Event

1. On the **Calendar** screen, tap **Manage Events**.
2. Tap on an event to edit, → make desired changes, → tap **Save**.
3. Press  to return to the **Calendar** screen.

Snooze or Cancel Event Alert

When a scheduled event is activated, a pop-up alert message appears.

Tap **Snooze** if you want to be reminded again in 10 minutes, or tap **Dismiss** to cancel the alert.



CONTACTS

You can create an address book of your personal contacts, including personal notes as desired.


Add New Contacts

1. Tap **Contacts** on the **Application Menu** screen.
2. Tap **Add Contact**.
3. In the **Add Contact** screen, tap in each entry field to enter your contact information.
4. Tap **Save**.

Edit Contacts

1. In the **Contacts** screen, tap on the desired contact name that you want to edit.
2. In the **Edit Contact** screen, tap in the entry fields to change or add information.
3. Tap **Save**.



Delete Contacts

1. In the **Contacts** screen, tap on one contact, or tap on the  next to multiple contacts.
2. Tap **Delete**.

Send Email

You can quickly and easily add contacts to an email message.



❖ *You must have your email set up in the device and the device must be connected to a Wi-Fi network.*

1. In the **Contacts** screen, tap on the  next to the contact names you want to include in your email.
2. Tap **Send Email**.
3. In the **Email Compose** screen, tap into the entry fields to enter the email subject and message → tap  to accept entries.
4. Tap **Send** to send the email to your contacts.



DICTIONARY

The built-in dictionary allows you to quickly and conveniently look up the definition of words, either within the media you are viewing or any other words.

1. Tap **Dictionary** on the **Application Menu** screen.
2. Enter the word to look up, → tap .
3. The word is displayed in the **Search word** box, → tap **Search**.
4. The definition of the word is displayed.
5. To look up a different word, tap in the **Search word** box; repeat steps 2-3.
6. Press  to exit the dictionary.

Reader Dictionary

You can also access the dictionary while reading a media file in the **Reader**.

1. While viewing a media page, press .

2. Tap **Dictionary**.
3. Tap on the word you want to look up.
4. If the definition is longer than the viewable area, finger slide the scroll bar to view the remainder of the definition.
5. Tap **X** to close the lookup window.







EMAIL

- ❖ *SMTP and IMAP accounts are supported.*
- ❖ **Note:** *This device does not support email attachments. Therefore, emails sent to you with attachments are received without the attachments.*

Setup New or Add Accounts

You can enter multiple personal email addresses that you would like to access through your `pandigital novel`.

1. Select **Email** from the **Application Menu** screen.

2. In the **Email Accounts** screen, tap **Settings**.
3. Tap **Add Account**.
4. Tap into the **Email** field to enter your email address, → tap .
5. Tap into the **Password** field and enter your email password, → tap .
6. Tap  next to **Set as Default**. If you add more email addresses later, you can change the default account.
7. Tap **Next**.
8. If the **Incoming Server Settings** were automatically populated, you can check the accuracy on your email provider's website. If necessary, enter/change the **Incoming Server Settings**, → tap **Next**.
9. Repeat for the **Outgoing Server Settings**, → tap **Next**.
10. Press  to return to previous screens.

Set up Yahoo! Plus Account

❖ *Your pandigital **novel** does not support free yahoo email accounts (POP3).*

Yahoo! Plus accounts must use the following data when setting up your email account.

Incoming Mail Server Settings

- POP server: **plus.pop.mail.yahoo.com**
- Use **SSL**
- Port: **995**

Outgoing Mail Server Settings

- SMTP server: **plus.smtp.mail.yahoo.com**
- Use **SSL**
- Port: **465**
- Use **Authentication**
- Account Name/Login Name: Your Yahoo! Mail ID (your email address without the “@yahoo.com”, for example “testing80”)
- Email Address: Your Yahoo! Mail address (for example, testing80@yahoo.com)
- Password: Your Yahoo! Mail password

Set up Juno Platinum or Turbo Account

❖ *Your pandigital novel does not support free juno email accounts (POP3).*

Platinum or Turbo Juno accounts must use the following data when setting up your email account.

Incoming Mail Server Settings

- POP server: **pop.juno.comnovel**

Outgoing Mail Server Settings



- SMTP server: **authsmtp.juno.com**


Manual Setup

After setting up your email account, use **Manual Setup** to edit the settings if necessary.



Email Inbox

1. Select **Email** from the **Application Menu** screen.
2. If you have multiple email accounts, tap on desired account to open, → tap **Inbox**.
3. Your mail is received and displayed in the **Inbox** screen.

❖ Press   to display next/previous pages.

4. Press  to return to previous screens.

Open Email Message

1. In the **Inbox** screen, tap on an email to open it.
2. Tap   or finger slide the scroll bar to scroll the email.
3. To reply or forward the message, tap **Reply** and then tap desired option:
 - Reply
 - Reply all
 - Forward
4. To display the previous or next email message listed in the Inbox, tap **Previous** or **Next**.
5. If you want to delete the message, tap **Delete**.

Compose New Email Message

1. In the **Inbox** screen, tap **Compose**.

2. Tap in the **To/CC/BCC** entry field and then enter the recipient's email address.
OR
Tap **Add Contacts** to select the recipient(s) from your **Contacts** list.
3. Tap in the **Subject** entry field to enter your desired subject title.
4. Tap in the **message** area to enter your personal message.
5. Tap **Send** when ready to send your email.
6. If you do not want to send or save the message, tap **Discard**.

Edit Email Account

1. Select **Email** from the **Application Menu** screen.
2. Select the account that you want to edit, tap **Setting**, → tap **Manual Setup**.
3. Make desired changes to settings.

Set Default Account

One email address must be designated as the default account, so if you have multiple email accounts you can designate any one as the default.

1. Select **Email** from the **Application Menu** screen.
2. Tap **Setting**.
3. Tap on the desired account, → tap **Set as Default**.

Delete Email Accounts

❖ *If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.*


1. Select **Email** from the **Application Menu** screen.
2. Tap **Setting**.
3. Tap on the desired account to be deleted, → tap **Delete Account**.
4. Tap ☒ to confirm deletion.



FILE MANAGER

Tap **File Manager** on the **Application Menu** screen.


View Internal Memory Contents

1. In the **File Manager** screen, the default media listed is the **Internal Memory**.
2. Tap on the desired media category, and if applicable tap on sub-category.
3. Tap on a media file to open it in its applicable application, or press  to return to previous screens.

View microSD Card Contents

❖ *Macintosh users must format SD cards using the FAT32 option in order for your pandigital **novel** to read the card.*


1. In the **File Manager** screen, tap **SD Card**.
2. If you created category folders on your SD card, tap on the desired category.

3. Tap on a media file to open it in its applicable application, or press  to return to previous screens.

Import Media from microSD Card

❖ *Macintosh users must format SD cards using the FAT32 option in order for your pandigital novel to read the card.*


 
Use this option to import all files found on microSD of selected type.

1. In the **File Manager** screen, tap **Import**.
2. Select the media types you want to import, → tap **Import**.
3. Files are copied into your pandigital novel.
4. Press  to return to previous screens.




Copy Specific Media Files into Internal Memory

Use this option to choose specific files to copy into the Internal Memory.


1. In the **File Manager** screen, tap the category in which there are files you want to copy.



2. Press  to display the option menu, → tap **CopyMode**.
3. Tap on the files you want to copy, → tap **OK**.
4. Press  to return to previous screens.

Delete Media Files from Internal Memory

1. In the **File Manager** screen, tap the category in which there are files you want to delete.
2. Press  to display the option menu, → tap **DeleteMode**.
3. Tap on the files you want to delete, → tap **OK**.
4. Tap  to confirm delete.
5. Press  to return to previous screens.

Rename Categories or Files

1. In the **File Manager** screen, select **Internal** or **SD Card** based on where your media resides that you want to rename.
2. If applicable, tap on the desired category.
3. Press  to display the option menu, → tap **RenameMode**.

4. Tap on the file you want to rename, → tap **OK**.
5. The keypad appears so you can enter the desired file name, → tap .
6. Press  to return to previous screens.



MUSIC










The following audio file formats are supported: MP3

The following methods can be used to add audio files to your Music List:



- Import audio files from a SD card
- Copy audio files from your computer via microUSB

Play Music




1. Tap **Music** on the **Application Menu** screen.
2. The **Music List** screen is displayed.
3. If desired, you can change the sort display by tapping **Artist** or **Title**.

4. Tap **Shuffle** if you want multiple audio files to play in random order (● = on). Otherwise they play in the order listed in the **Music List**.
5. Tap **Repeat** if you want the audio files to play over and over until you stop them (● = on). Otherwise the audio files play once and then stop.
6. To play all songs listed, tap **Select All**, → tap **Play**.
To play one song, tap on the song, → tap **Play**.
To play selected songs, tap  next to the desired songs, → tap **Play**.
7. Tap  to pause/stop,  to play, /  to play previous/next audio file, and  to adjust the volume.
❖ *You can also press  and then  to adjust the volume.*
8. Press  to display the **Application Menu** screen. The music continues to play even when you launch other applications.

Stop Music

1. Tap **Music** on the **Application Menu** screen to re-display the **Music Play** screen.
2. Tap .
3. Tap **Menu** to return to the **Music List** screen.
4. Press  to return to the **Application Menu** screen.


Delete Audio Files

1. Tap **File Manager** on the **Application Menu** screen.
2. Tap the **Music** category.
3. Press  to display the option menu, → tap **DeleteMode**.
4. Tap on the files you want to delete, → tap **OK**.
5. Tap  to confirm delete.
6. Press  to return to previous screens.


Playlist

If desired, you can create a separate playlist of selected audio files (*i.e., your favorite tunes, specific genre, specific artist, etc.*) from your **Music List**, allowing you to play the selected list at any time.

Add songs to Playlist

1. In the **Music List** screen tap  next to the song titles you want to add.
2. Tap **Add to Playlist**.
3. A message confirms the playlist was updated.

Play songs in Playlist

1. In the **Music List** screen, tap **Playlist** at the top of the screen.
2. To play all songs listed, tap **Select All**, → tap **Play**.
To play one song, tap on the song listing, → tap **Play**.
To play selected songs, tap  next to the desired song files, → tap **Play**.

3. To return to the main **Music List** screen, tap **Artist** or **Title** at the top of the screen.

Remove songs from Playlist

Every time you tap **Add to Playlist**, the entire playlist is updated with the songs that are selected in the main Music List.

To remove songs from the playlist, simply de-select them in the main Music List and tap **Add to Playlist** again.



PHOTOS







The following photo file formats are supported:
JPEG and PNG





The following methods can be used to add photos to the device:

- Import photo files from a SD card
- Copy photo files from your computer via microUSB

Photo Gallery

1. Tap **Photos** on the **Application Menu** screen.
2. The **Photo Gallery** screen is displayed with photos arranged alphabetically in ascending order. You can tap **View [ASC]** to change the display to descending order **[DSC]**.
*❖ You can set the photos to display by date added to the device through **Settings** → **Photos** (pg. 106).*
3. To view individual photos, tap on a photo.
4. When a photo is displayed in full-screen mode, a **Photo Function Menu** appears at the top of the screen with the following options:


 Back	Return to Photo Gallery screen.
 Zoom In	Enlarges the photo view; tap multiple times until desired view is achieved. Tap     to pan the viewable section of the photo.

 Zoom Out	Tap to reduce the photo view back to normal size.
 Rotate	Rotates photo 90 degrees clockwise; tap multiple times until desired orientation is achieved.
 Previous	Display previous photo listed in Photo Gallery
 Next	Display next photo listed in Photo Gallery





 
Play Slideshow

To play a slideshow of all photos, in the **Photo Gallery** screen, tap **Slideshow** without selecting any photos.




To play a slideshow of selected photos, tap **Multiple Select**, → tap on each photo you want to include, → tap **Slideshow**.

Press  to return to the **Photo Gallery** screen.

Slideshow Options

1. While slideshow is playing, tap anywhere on the photo to display the option menu.
2. Tap the  and  to set the speed at which the slideshow photos transition from one to another (*default = 5 seconds*).
3. Tap  to zoom in on the photo.
4. Tap  to resume the slideshow.
5. Tap  to return to the **Photo Gallery**.

Delete Photo Files

1. Tap **File Manager** on the **Application Menu** screen.
2. Tap the **Photos** category.
3. Press  to display the option menu, → tap **DeleteMode**.
4. Tap on the files you want to delete, → tap **OK**.
5. Tap  to confirm delete.
6. Press  to return to previous screens.



READER

The **Reader** is used to display your digital media (eBooks, Magazines, and Newspapers).

❖ *eBook supported formats: EPUB and PDF*

Methods that can be used to launch the **Reader**:

- Tap on a media cover in **My Library** or in a **Bookshelf**.
- Tap **Reader** on the **Application Menu** to open the last read media file.
- Tap the media title in the **Continue Reading** section at the bottom of the **Application Menu** screen.

Indicates page is bookmarked

Press  to display the **Reader Function Menu**

Press  or  to re-hide it

Tap to scroll page down
(appears in .pdf files)



Fit page to screen

Return to normal view
(appears when zoomed)







Tap to scroll page right (appears in .pdf files)

Finger slide right-to-left for next page.

Or press   to scroll next/previous pages.


Zoom in/out

❖ If you are viewing a .pdf file that has not been sized to fit the device screen you have zoomed the page, the     arrows appear for scrolling the viewable portion of the page.

❖ To turn **Sleep Mode On/Off**, slide & release the power switch quickly.



- ❖ *For optimum battery charge saving while reading, turn **Wi-Fi Off** (pg. 110) and **Power Saving On** (pg. 102).*
- ❖ *To switch viewing orientation from Portrait (vertical - default) to Landscape (horizontal), tap **Settings** → **General** → **Orientation**.*

Reader Function Menu

Press  to display the **Reader Function Menu** at the top of the screen.




- ❖ **IMPORTANT:** *When the **Reader Function Menu** is displayed, normal Reader functions, such as page turn and zoom are inoperable.*

Always press  or  to re-hide the menu when you're done with the menu functions.




My Library

1. With page displayed in the Reader, press  to display the **Reader Function Menu**.
2. Tap **My Library**.
3. **My Library** screen is displayed. Refer to **My Library** section beginning on page 44 for features.



Dictionary

The built-in dictionary allows you to quickly and conveniently look up the definition of words either within the media you are viewing or any other words.

1. With page displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **Dictionary**.
3. Tap on the word you want to look up.


4. If the definition is longer than the viewable area, finger slide the scroll bar to view the remainder of the definition.
5. Tap **X** to close the lookup window.



Table of Contents

Quickly view the **Table of Contents** of the media file you are viewing.



❖ *The Table of Contents font size is fixed and cannot be changed using the Font Size function.*

1. With page displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **TOC**.
3. Tap on the chapter/page you want to view to jump to the selected page.




Bookmarks

Bookmark a page




1. With page displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **Bookmarks**.
3. Tap **Add Bookmark**.
4. A  is added to the top left corner of the page when bookmarked.
5. To remove bookmark, simply tap **Bookmarks**, → tap **Remove Bookmark**.

View Bookmark List


1. With page displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **Bookmarks**.
3. Tap **Bookmark List**. All bookmarks within the media file are listed.

4. Tap on a bookmark to go to the page.

Highlight text on a Page




1. With page displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **Bookmarks**.
3. Tap **Highlight**.
4. Finger slide over the text you want to highlight.
5. To cancel the highlight, while it's still dark and before highlighting any other text, tap .
6. Tap  to save highlights.

View Highlights List




1. With page displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **Bookmarks**.
3. Tap **Highlight List**. All highlights within the media file are listed.

4. Tap on a highlight to go to the page.


Delete Highlights

1. With page that contains highlights displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **Bookmarks**.
3. Tap **Highlight**.
4. Tap on the highlighted text; the highlight darkens.
5. Tap  to delete.
6. Tap  to save changes.





Add Note to Page

1. With page displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **Bookmarks**.
3. Tap **Add Note**.
4. Enter your note, → tap  to save.
5. A note indicator icon  appears in the upper left corner of the page.

View Notes List

1. With page displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **Bookmarks**.
3. Tap **Notes List**.
4. Tap on a note listing to jump to that page.


Edit/Delete Notes

1. With page containing note displayed in the **Reader**, tap on the note indicator icon.
2. To **Edit**: tap , → make desired edits, → tap  to re-save.
3. To **Delete**: tap , tap  to confirm deletion.



Go To



Use the **Go To Page** function to quickly jump to a specific page or word within the media file you are viewing.

1. With page displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **Go To**.
3. To jump to a **page**, enter the desired page number, → tap **GO**; the selected page is displayed.
4. To jump to a specific **word**, tap **Word**, → enter the desired word, → tap **GO**. The first page found with the entered word is displayed.
5. After jumping to different pages, tap **Last Read** to return to the original page you were viewing.




Font Size



 
For optimal viewing, you can adjust the size of the onscreen text by changing the **Font Size**.

1. With page displayed in the **Reader**, press  to display the **Reader Function Menu**.
2. Tap **Font Size**.
3. Tap the desired font size from the drop-down list.
4. Press  to close the drop-down list.

Play Music in Background while Reading

When desired, you can play music in the background as you read in the Reader.



1. Start the music as instructed under **Play Music** beginning on page 82.
2. Press  to return to the **Application Menu** screen.








3. Open desired media file in the **Reader**; the music continues to play as you read.
4. To stop the music, press  to return to the **Application Menu** screen, → tap **Music**, → tap , and then .





SETTINGS

Settings → General

1. Tap **Settings** on the **Application Menu** screen.
2. Tap **General**.
3. The **Registered to** entry field shows your Barnes & Noble account email address. This is entered under **Settings → Barnes & Noble Account** (*pg 104*).
4. **Language:** Tap   to choose the desired language.

5. **Orientation:** Tap   to set the screen display orientation, **Portrait** (*vertical - default*) or **Landscape** (*horizontal*), or select **Auto** to have the orientation automatically switch orientation when you turn the device.
6. **Screen Saver:** The device automatically enters **Screen Saver** mode when left idle for a period of time; tap   to set the desired period of time. The device automatically enters **Sleep** mode when left in Screen Saver mode for 3 minutes; slide the power switch quickly to turn Sleep mode off.
7. **Power Saving:** This feature is designed to help achieve the longest reading time per battery charge when using the **Reader** application.
The default power saving mode is **Off**. Tap   to turn **On** for optimum reading time per battery charge. When On, the power saving icon  appears at the top of the screen.
- ❖ *You must also turn the Wi-Fi Off when using the Power Saving feature (pg. 110).*

❖ *You may experience slower responses in performance when **Power Saving** is turned On.*




8. Tap  to save settings.
9. Press  to return to previous screens.

Settings → Date and Time




IMPORTANT: In order to connect with your Barnes & Noble online account, the Date and Time must be set correctly according to your location.

1. Tap **Settings** on the **Application Menu** screen.
2. Tap **Date and Time**.






Set Time Zone

- a. Tap the **Time Zone** icon .
- b. Tap on the appropriate **Country** and then **Region** for your location.
 - ❖ Press   to display next/previous pages.

Set Date

- a. Tap on the **Date** icon .
- b. Tap on the individual year/month/day fields that you want to change, and then tap   to adjust settings.



 
Set Time

- a. Tap on the **Time** icon .
 - b. Tap on the individual hour/minute fields that you want to change, and then tap   to adjust settings.
 - c. Tap 12HR or 24HR for desired time format.
12HR = 12:00am-12:00pm (*default*)
24HR = 12:00-24:00
3. Tap the  to save settings.
 4. Press  to return to previous screens

Settings → Barnes & Noble Account

Register your Barnes & Noble account login information on your device.

- ❖ *You must be connected to a Wi-Fi network in order to set up your Barnes & Noble account.*

1. Tap **Settings** on the **Application Menu** screen.
2. Tap **Barnes & Noble Account**.
3. Tap in the **B&N Account** field to display the Barnes & Noble Login entry box.
4. Enter the email address that is registered with your Barnes & Noble account, → tap .
5. Enter your password, → tap .
6. Tap **Login**.
7. The device logs into the Barnes & Noble server to verify your account information. If successful, the Barnes & Noble Account screen is displayed again.
8. Press  to return to previous screens.

Create new account

If you want to register a new account with Barnes & Noble, tap **Create new account**.


The browser launches and displays the Barnes & Noble Account setup page. Follow the prompts to create your new account.

Forgot password

If you have forgotten your password, tap **Forgot password**.

The browser launches and displays the Barnes & Noble **Sign In or Create Account** web page. Tap **Forgot your password?** and then follow the prompts to reset your password.







De-register


 
If you want to delete your Barnes & Noble login information and delete the media unlock information in the device, tap **De-register**, → tap  to confirm.

CAUTION: De-registering causes the media in the device to be locked and can only be opened by providing the Barnes & Noble login information and credit card that was used to purchase the media.

Settings → Photos


Use these functions to set your Slideshow preferences.

1. Tap **Settings** on the **Application Menu** screen.
2. Tap **Photos**.
3. **Slideshow Interval:** Tap the  and  to set the speed at which the slideshow photos transition from one to another (*default = 10 seconds*).
4. **Display Current Date and Time:** Tap  to select if you want the current date and time displayed with your photos.
5. **Enable Music with Slideshow:** Tap  to select if you want music to automatically play with your photo slideshows.
If enabled, you can optionally select the music source from these options:
Select music: Select if you want to choose one particular audio file to play. Tap  to select the option, → tap **Select music** to select the desired audio file; the title is displayed
Playlist: Select if you want the music in your custom playlist to play. Tap  to select. You must have a music added to the playlist; otherwise the music defaults to the main music library (*pg. 82*).

6. **Photo Display Order:** Select desired order in which you want your photos displayed in the **Photo Gallery**, by **Date added** or by **File Name**.
7. Tap  to save your settings.
8. Press  to return to previous screens.


Settings → Network





In order to connect to the Internet, you must have a Wi-Fi network set up on your *pandigital novel* 1. If you did not set up a network during the initial setup, do so now.

1. Tap **Settings** on the **Application Menu** screen.
2. Tap **Network**.
3. If your Wi-Fi status is off, tap **Turn ON**.
4. The device automatically scans and lists local Wi-Fi Networks found.
A  indicates secure networks that require login name/password to connect.
5. Tap the desired network to which you want to connect.

6. If applicable, enter the network **Password**.
The password is remembered for future connections.

7. Tap .

When connected, the Wi-Fi status icon  appears at the top of the screen.

- ❖ *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Hidden networks** and then enter the network name, type of Authentication, and password, → tap .*
- ❖ *To re-scan for local Wi-Fi networks, tap .*
- ❖ *To view or change any of the network settings, tap . If you made changes, tap  to save.*
- ❖ *To disconnect from a connected network, simply tap on the network.*

Turn Wi-Fi Off

There may be times when you want to prevent your device from connecting to a Wi-Fi network, even if you've set the network up on your device.

1. Tap **Settings** on the **Application Menu** screen.
2. Tap **Network**.
3. Tap **Turn OFF**.

The Wi-Fi status icon  no longer appears at the top of the screen.

Settings → Advanced Settings

Firmware Update



WARNING! If you update your firmware, all Barnes & Noble account information and Adobe DRM Activation records will be deleted, and application feature default settings will be factory reset. It is strongly recommended that you **back up** all downloaded media to your computer **before** updating your firmware.

IMPORTANT: Make sure the device battery is fully charged before you begin the update. If the battery power is too low, a “FAILED” message appears and the upgrade is terminated.

1. On the **Home** screen, tap **Settings**.
2. Select **Advanced Settings** → **Firmware Update** → select ☒ to confirm update.
A download verification message is displayed, followed by a progress bar.
3. Wait as the device is updated and the “Successful Firmware Update” message appears.
4. Slide the power switch and hold for 5 seconds to reboot the device.
5. Wait for the **Home** screen to be displayed.
6. Use **Settings** → **Date and Time** to reset the Date and Time according to your location.

Note: *In order to connect with your Barnes & Noble online account, these must be set correctly.*

Restore to default


Restoring the defaults using this option changes all general settings back to the factory pre-set defaults. Your downloaded media, contact list, photos, etc. are not affected.

1. Tap **Settings** on the **Application Menu** screen.
2. Tap **Advanced Settings**.
3. Tap **Restore to default**.
4. Tap ☒ to confirm the reset.

Restore to default and remove user information

❖ **WARNING:** *This option changes all general settings back to the factory pre-set defaults **AND deletes** your personal settings, downloaded media, contact list, photos, etc.. Use this option only if you want the device completely returned to “out-of-box” status.*

1. Tap **Settings** on the **Application Menu** screen.

2. Tap **Advanced Settings**.
3. Tap **Restore to default and remove user info**.
4. Tap  to confirm the reset.

Settings → Support

The information on the **Technical Support Information** screen is for reference if you contact Technical Support.

1. Tap **Settings** on the **Application Menu** screen.
2. Tap **Support**.



SUDOKU

Tap **Sudoku** on the **Application Menu** screen to play the popular number-placement game.

Each Sudoku puzzle has a unique solution that can be reached logically without guessing.

❖ *The Internet is a good source for more information about playing Sudoku.*

Game Rules

1. Enter digits from 1 to 9 into the blank spaces. Every row must contain one of each digit. So must every column, as must every 3x3 square.
2. Touch a number at the top of the screen, and then touch in a square to add the number to that square.
3. If you enter a number incorrectly, you can fix by selecting a new number at the top of the screen and tap on the incorrect number.

USER GUIDE

The full `pandigital novel` User Guide is included as a book in **My Library**. To view it, tap on the User Guide book cover:



Once open, you can use the standard **Reader** functions to search and navigate through the document in the same manner as your downloaded media files.

If you want to print the User Guide, copy it to your computer using the **Connect to Computer** instructions beginning on page 115.

The User Guide is also posted on our website:
www.pandigital.net/downloads.


Connect to Computer

You can connect your `pandigital novel` to a Windows or Macintosh computer via a micro USB cable to copy files between the two devices.

❖ *Compatible with operating systems: Windows XP, Windows Vista, Windows 7, Mac OSX*

❖ *If the device is in Sleep mode, it won't be detected by your computer. Slide the power switch and release quickly to disable Sleep mode first.*

Connect to Windows PC

1. Connect the small end of the micro USB cable to the `pandigital novel` micro USB port, and the larger end to an available Type A USB port on your computer.
2. Tap  when prompted to use the device as a mass storage. The device is recognized by your computer as a removable drive. "Sync in progress" is displayed on the screen while connected.
3. Open a Windows Explorer window. The `pandigital novel` drive is listed as **PD_NOVEL**.

4. To copy files into your `pandigital novel`, select and drag the desired files into the appropriate pre-assigned folder:
- **eBooks**
 - **eBooks/BNDownloads/books**
 - **eBooks/BNDownloads/magazines**
 - **eBooks/BNDownloads/newspapers**
 - **Music**
 - **Photos**
- ❖ *Do not break the USB connection while copying files.*
5. To copy files from your `pandigital novel` into your computer, select and drag the desired files to any desired location on your computer.

Disconnect

It is important to always perform a safe PC 'release' before disconnecting the micro USB cable from the `pandigital novel` and computer.

Windows 7

1. On the Windows System Tray, click the hardware removal icon.
2. Click the **Eject Removable Disk** message corresponding with the `pandigital novel` device drive.
3. When the message “Safe to Remove Hardware” appears, disconnect the micro USB cable from your `pandigital novel` and computer.

Windows VISTA

1. On the Windows System Tray, click the hardware removal icon.
2. Click the **Safely remove USB mass Storage** device message corresponding with the `pandigital novel` device drive.
3. When the message “This device can now be safely removed from the computer” appears, disconnect the micro USB cable from your `pandigital novel` and computer.

Windows XP


1. On the Windows System Tray, click the hardware removal icon.
2. Click **Remove Hardware Safely**.
3. Select the storage device corresponding with the `pandigital novel`, and then click **Stop** to disconnect. A final dialog box opens.
4. Click **Close**.
5. When the message ***“It is now Safe to Disconnect Hardware”*** appears, disconnect the micro USB cable from your `pandigital novel` and computer.

Connect to Macintosh Computer

❖ *eBooks downloaded from Barnes & Noble to a Macintosh computer are saved in an unsupported .pdb format. If you copy the .pdb formatted eBooks into your `pandigital novel`, they will not be recognized. You should always use **Get Books** to download eBooks directly from your Barnes & Noble download library into your `pandigital`*

novel. Books that are only available in .pdb format are not downloadable even when you use **Get Books**.

❖ *Music and Photo files can be copied from a Macintosh computer into your **pandigital novel** as long as they are in a supported file format.*

1. Connect the small end of the micro USB cable to the **pandigital novel** micro USB port, and the larger end to an available USB port on your computer.
2. Tap  when prompted to use the device as a mass storage. The device is recognized by your computer as a removable drive. “Sync in progress” is displayed on the screen while connected.
3. Macintosh recognizes the **pandigital novel** as an external storage device titled **PD_NOVEL**.
4. Double-click the **PD_NOVEL** icon that appears on the desktop.

5. To copy files into your **p a n d i g i t a l n o v e l**, select and drag the desired files into the appropriate pre-assigned folder:

- **eBooks**
- **eBooks/BNDdownloads/books**
- **eBooks/BNDdownloads/magazines**
- **eBooks/BNDdownloads/newspapers**
- **Music**
- **Photos**

Disconnect

1. To safely disconnect from your Macintosh, select the **PD_NOVEL** icon on your desktop and press **Command-e** to eject the disk.
2. When the icon is no longer on the desktop, it is safe to unplug the micro USB cable.

Frequently Asked Questions

ADOBE® eBooks

Q: Are digital books other than Barnes & Noble compatible with the pandigital novel?

A: Yes, as long as the eBook is in .epub or .pdf format. Refer to Adobe® eBooks section to use Adobe Digital Editions software to transfer to your device (*pg. 31*).

Q: Does the pandigital novel support Adobe® eBooks which have Digital Rights Management (DRM) on them?

A: Yes, as long as the eBook is in .epub or .pdf format.

Q: Does the pandigital novel support eBooks borrowed from a public library using a global distributor such as Overdrive.com?

A: Yes. Download the books to your computer and then use Adobe Digital Editions software to transfer them to your pandigital **novel**.

BASIC FUNCTIONALITY

Q: Do I have to charge the battery before use?

A: Yes. Charge the battery for 4 hours using the included USB power adapter with the micro USB cable or connecting micro USB cable to your computer (pg. 18). You can use your device while the battery is charging.

Q: Is it easy to set up my pandigital novel?

A: Yes! Charge the battery, turn your device on and follow the prompts for the initial setup. It's that simple!

Q: How do I contact Customer Support?

A: If this FAQ section doesn't answer your questions, you can contact Customer Support at www.pandigital.net.

BROWSER

Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to your pandigital novel.

CALENDAR

Q: Can I schedule events on any date?

A: Yes, however, only one event per date is allowed.

COMPUTER COMPATIBILITY

Q: Which media cards are compatible with my **pandigital novel?**

A: Only microSD Cards.

Q: Which Operating Systems are compatible with my **pandigital novel?**

A: Microsoft Windows XP, Windows VISTA, Windows 7, and MAC OS.

Q: How do I connect my **pandigital novel with my computer?**

A: Use a micro USB cable. Refer to the **Connect to Computer** (pg. 115).

eBooks, Magazines, Newspapers

Q: What types of media files are compatible with my pandigital novel?

A: EPUB and PDF

Q: How do I purchase books from Barnes & Noble?

A: Make sure you are connected to a Wi-Fi network. On the **Application Menu** screen, tap **Bookstore** and then tap on a media cover to display the **Buy Now** button. Or you can tap **Shop B&N** and shop online the same as you would on your computer.

Q: How do I download books to my pandigital novel after I purchase them from Barnes & Noble?

A: Use **My Library** → **Get Books** (pg. 48).

Q: What types of eBook, Magazine, and Newspaper files are compatible with my pandigital novel?

A: EPUB and PDF

Q: Does the pandigital novel support eBooks borrowed from a public library using a global distributor such as Overdrive.com?

A: Yes. Download the books to your computer and then use Adobe Digital Editions software to transfer them to your **pandigital novel** (pg. 31).

Q: How does the Lend/Return Books feature work?

A: You can lend to or borrow books from your friends & family that Barnes & Noble has classified as “lendable”. Use **Lend/Return Books** function to lend or borrow (pg. 53).

Q: How long can I lend or keep a borrowed book?

A: Only two (2) weeks, and then it expires, is automatically returned to lender, and removed from **My Library**.

EMAIL

Q: Can I use any of my personal email addresses to send/receive email?

A: Your pandigital novel supports SMTP and IMAP accounts. It does not support and some of the free (POP3) email accounts such as yahoo.com and junos.com.

Q: Can I add my email contacts into my Contact list?

A: No, not at this time. However, you can use your contact list to retrieve an email address when composing an email message.

FIRMWARE UPDATE

Q: What should I do if a “FAILED” message appears on the screen during a firmware update?

A: The battery must be fully charged or the device cannot update the firmware. Charge the battery for 4 hours, then try again.

MUSIC

Q: What type of audio files can I play on my **pandigital novel?**

A: Only MP3 file format.

Q: How do I add audio files to my **pandigital novel?**

A: You can download audio files from your favorite online music store, import audio files from a microSD card (pg. 80), or copy audio files from your computer (pg. 115).

Q: Can I create a separate list of my favorite songs?

A: Yes. Use **Music** → **Playlist** (pg. 85).

MY LIBRARY

Q: How do I add media to My Library?

A: You can download media from Barnes & Noble, import media from your microSD card, or copy media files from your computer via microUSB cable.

Q: Can I create personal bookshelves for organizing my media?

A: Yes. Use **My Library** → **Bookshelves** (pg.

57).

Q: Do I need an account with Barnes & Noble to download from their site?

A: Yes. You also need a valid credit card registered with your account in order to download purchased media from your online download library.

Use **My Library** → **Get Books** to download your media (*pg. 48*).

Q: How do I display the Application Menu from other application screens?

A: Press , multiple times if necessary, until the **Application Menu** screen is displayed.

Q: What is the S:##, F:## and T:## shown during a Get Books download process?

A: S:## = successful download
F:## = failed download
T:## = total to be downloaded

PHOTOS

Q: What type of photo files can I view on my pandigital novel?

A: JPG, JPEG, PNG

Q: How do I add photo files to my **pandigital novel?**

A: You can download photo files from online photo sharing websites, import them from your microSD card (*pg. 80*), or copy them from your computer (*pg. 115*).

Q: Can I view individual photos as well as slideshows?

A: Yes. On the **Photo Gallery** screen you can select individual photos to view or tap **Slideshow** to play a slideshow (*pg. 86*).

Q: Can I set preferences for how my slideshow displays?

A: Yes. Slideshow options are available through **Settings** → **Photos** (*pg. 106*).

READER

Q: Can I view media files in either vertical or horizontal orientation?

A: Yes, eBooks, Magazines, Newspapers or photos. To switch viewing orientation, tap **Settings** → **General** → **Orientation** and select desired orientation.

Q: Can I change the size of the displayed text in the Reader?

A: Yes. Either tap the  in the lower right corner, or press , tap **Font Size**, and then tap the desired size from the list.

Q: Can I easily jump to a specific page?

A: Yes. Use **Reader** → **Go to** (pg. 99).

Q: Can I play music and read at the same time?

A: Yes. Refer to **Play Music in Background while Reading** (pg. 100).

Q: How do I display the Reader Function Menu while reading?

A: Press .

Q: How do I return to the Application Menu from Reader?

A: Press .

Q: Can I bookmark a page in the Reader?

A: Yes. Use the **Bookmarks** function in the **Reader** function menu (pg. 95).

Q: Can I highlight text on a page?

A: Yes, use the **Bookmarks** function in the **Reader** function menu (pg. 95).

Q: Can I add a note to a page?

A: Yes, use the **Bookmarks** function in the **Reader** function menu (pg. 95).

Q: Does the Reader have a Dictionary?

A: Yes. Access the dictionary directly from the **Application Menu** screen (pg. 71) or through the **Reader** (pg. 71).

Q: Can I read books stored on my microSD card?

A: Yes, although we recommend that you import the book into your **pandigital novel** so it is available after you remove the microSD card.

Q: Why doesn't my pandigital novel read my microSD card?

A: If you create a microSD card using a Macintosh computer, you must use the FAT32 option when formatting the microSD card, otherwise the device does not read the card.

Battery Management


The `pandigital novel` is delivered with some charge on the battery, but before you start to use your device, it is recommended that you charge the battery for 4 hours.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:


- Use your device at least once a week.
- Charge the battery regularly and fully. Never leave the battery fully discharged for a long period of time.
- Always keep your device and the battery away from heat.

Charge Battery

USB Power Adapter: Plug the USB power adapter into an electrical wall outlet, and then connect to your device to fully charge the battery before use (*4 hours*).

Micro USB Cable: Connect the **micro USB cable** to your computer. If you want to use the device while the battery is charging, tap  when prompted to use the device as a mass storage.

While charging, the battery icon displays as: .

When fully charged, the battery icon displays as: .

A fully discharged battery takes approximately 4 hours to fully charge.

❖ *You can use the device while the battery is charging.*

Technical Specifications

Product Specs	6" Digital ePaper Display
Compatible Media Sources	microSD card: Micro Secure Digital™ card (microSD) PC: Windows XP, Windows Vista, Windows 7 Macintosh: MAC OSX
Features	<ul style="list-style-type: none">▪ Reader for eBooks, Magazines, and Newspapers▪ Wi-Fi compatible▪ Direct links to Barnes & Noble online eBookstore▪ Plays Audio files▪ Displays Photo files▪ Clock and Calendar with events▪ Sudoku game▪ Built-in Dictionary▪ Contact list▪ Email▪ Web Browser▪ Alarm clock▪ File Manager

Compatible File Formats	eBooks, Magazines, Newspapers	EPUB, PDF
	Photos	JPG, JPEG, PNG
	Audio	MP3
USB Ports	Micro USB 2.0	
Internal Memory	2GB	
Wi-Fi Compatible	Yes, built-in Wi-Fi adapter (b/g)	
Audio output	Built-in stereo speakers	
USB Power Adapter	5VDC 1A	
Battery	Rechargeable Li-Ion 1530mAh, 3.7V	

Limited Warranty

To register your product or view the product warranty, please visit us at www.pandigital.net

FCC Notices

FCC ID: VRS-PD060B00

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communications Commission (FCC) Statement Information to the User



WARNING! Changes or modifications to this device not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT NOTE:

Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

Disclaimers

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries.

Copyright© 2005 Cisco Systems, Inc. All rights reserved.

Barnes & Noble and the "BN" logo are registered trademarks of Barnes & Noble, Inc. All rights reserved.

Facebook and the "f" logo are registered trademarks of Facebook Inc. All rights reserved. Yahoo!® is a registered trademark of Yahoo!

Contains Reader® Mobile technology by Adobe Systems Incorporated.

License Agreement and Terms of Use

By activating and using the `p a n d i g i t a l n o v e l`, you hereby consent and agree to our License Agreement and Terms of Use.

The Device and Related Services

The Pandigital Novel (the "Device") is a portable electronic reading device that utilizes wireless connectivity to enable users to shop for, download, browse, and read books, newspapers, magazines, blogs, access websites, e-mail and other materials, all subject to the terms and conditions of this Agreement. The "Service" means the wireless connectivity, provision of digital content, software and support, and other services and support that Pandigital provides Device users.

Wireless Connectivity

Coverage and Service Interruptions: You acknowledge that if your Device is located in any area without applicable wireless connectivity, you may not be able to use some or all elements of the wireless services. Pandigital is not responsible for the unavailability of wireless service or any interruptions of wireless connectivity.

Digital Content

The Barnes & Noble Store: The Barnes & Noble Store enables you to download, display and use on your Device a variety of digitized electronic content, such as books, subscriptions to magazines, newspapers, journals and other periodicals, blogs, RSS feeds, and other digital content, as determined by Barnes & Noble from time to time (individually and collectively, "Digital Content").

Use of Digital Content: Upon your payment of the applicable fees set by Barnes & Noble, Barnes & Noble grants you the non-exclusive right to keep a permanent copy of the applicable Digital Content and to view, use, and display such Digital Content an unlimited number of times, solely on the Device or as authorized by Barnes & Noble as part of the Service and solely for your personal, non-commercial use. Digital Content will be deemed licensed to you by Barnes & Noble under this Agreement unless otherwise expressly provided by Barnes & Noble. Usage of the Barnes & Noble Store constitutes acceptance of all terms and conditions as defined by Barnes & Noble.

Restrictions: Unless specifically indicated otherwise, you may not sell, rent, lease, distribute, broadcast, sublicense or otherwise assign any rights to the Digital Content or any portion of it to any third party, and you may not remove any proprietary notices or

labels on the Digital Content. In addition, you may not, and you will not encourage, assist or authorize any other person to, bypass, modify, defeat or circumvent security features that protect the Digital Content.

Software

Definitions: The following terms apply to the Device and to (a) all software (and the media on which such software is distributed) of Pandigital or third parties that are pre-installed on the Device at time of purchase or that Pandigital provides as updates/upgrades to the pre-installed software (collectively, the "Device Software"), unless you agree to other terms as part of an update/upgrade process; and (b) any printed, on-line or other electronic documentation for such software (the "Documentation"). As used in this Agreement, "Software" means, collectively, the Device Software and Documentation.

Use of the Device Software: You may use the Device Software only on the Device. You may not separate any individual component of the Device Software for use on another device or computer, may not transfer it for use on another device or use it, or any portion of it, over a network and may not sell, rent, lease, lend, distribute or sublicense or otherwise assign any rights to the Software in whole or in part.

No Reverse Engineering, Decompilation, Disassembly or Circumvention: You may not, and you will not encourage, assist or authorize any other person to, modify, reverse engineer, decompile or disassemble the Device or the Software, whether in whole or in part, create any derivative works from or of the Software, or bypass, modify, defeat or tamper with or circumvent any of the functions or protections of the Device or Software or

any mechanisms operatively linked to the Software, including, but not limited to, augmenting or substituting any digital rights management functionality of the Device or Software.

Automatic Updates: In order to keep your Software up-to-date, Pandigital may automatically provide your Device with updates/upgrades to the Software.

Export Regulations: You agree to comply with all export and re-export restrictions and regulations of the Department of Commerce and other United States agencies and authorities, and not to transfer, or encourage, assist or authorize the transfer of the Software to a prohibited country or otherwise in violation of any such restrictions or regulations.

General

No Illegal Use and Reservation of Rights: You may not use the Device, the Service or the Digital Content for any illegal purpose. You acknowledge that the sale of the Device to you does not transfer to you title to or ownership of any intellectual property rights of Pandigital or its suppliers. All of the Software is licensed, not sold, and such license is non-exclusive.

Information Received: The Device Software will provide Pandigital with data about your Device and its interaction with the Service (such as available memory, up-time, log files and signal strength) and information related to the content on your Device and your use of it (such as automatic bookmarking of the last page read and content deletions from the Device). Information we receive is subject to the Pandigital Privacy Notice.

Patents: The Device and/or methods used in association with the Device may be covered by one or more patents or pending patent applications.

Termination: Your rights under this Agreement will automatically terminate without notice from Pandigital if you fail to comply with any term of this Agreement. Pandigital's failure to insist upon or enforce your strict compliance with this Agreement will not constitute a waiver of any of its rights.

Disclaimer of Warranties: YOU EXPRESSLY ACKNOWLEDGE AND AGREE THAT USE OF THE SERVICE, DEVICE, DIGITAL CONTENT AND SOFTWARE IS AT YOUR SOLE RISK. EXCEPT FOR THE LIMITED WARRANTY, THE SERVICE, DEVICE, DIGITAL CONTENT AND SOFTWARE ARE PROVIDED "AS IS" WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND AND PANDIGITAL AND ITS SUPPLIERS AND LICENSORS DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, ACCURACY, QUIET ENJOYMENT AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY PANDIGITAL OR AN AUTHORIZED REPRESENTATIVE OF PANDIGITAL SHALL CREATE A WARRANTY. THE LAWS OF CERTAIN JURISDICTIONS DO NOT ALLOW THE DISCLAIMER OF IMPLIED WARRANTIES. IF THESE LAWS APPLY TO YOU, SOME OR ALL OF THE ABOVE DISCLAIMERS, EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU, AND YOU MAY HAVE ADDITIONAL RIGHTS.

Limitation of Liability: TO THE EXTENT NOT PROHIBITED BY LAW, NEITHER PANDIGITAL NOR ITS SUPPLIERS OR LICENSORS SHALL BE LIABLE TO YOU FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER LEGAL THEORY RELATED TO THE SERVICE, DEVICE, DIGITAL CONTENT OR SOFTWARE, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES ARISING OUT OF LOSS OF PROFITS, REVENUE, DATA OR

USE OF THE DEVICE OR SOFTWARE OR ANY ASSOCIATED PRODUCT, EVEN IF PANDIGITAL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN ANY CASE, PANDIGITAL'S AGGREGATE LIABILITY UNDER THIS AGREEMENT SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID FOR THE DEVICE. THE LAWS OF CERTAIN JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. IF THESE LAWS APPLY TO YOU, SOME OR ALL OF THE ABOVE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU, AND YOU MAY HAVE ADDITIONAL RIGHTS.

Disputes: ANY DISPUTE ARISING OUT OF OR RELATING IN ANYWAY TO THIS AGREEMENT SHALL BE SUBMITTED TO CONFIDENTIAL ARBITRATION IN ALAMEDA COUNTY, EXCEPT THAT, TO THE EXTENT YOU HAVE IN ANY MANNER VIOLATED OR THREATENED TO VIOLATE PANDIGITAL'S INTELLECTUAL PROPERTY RIGHTS, PANDIGITAL MAY SEEK INJUNCTIVE OR OTHER APPROPRIATE RELIEF IN ANY STATE OR FEDERAL COURT IN THE COUNTY OF ALAMEDA, AND YOU CONSENT TO EXCLUSIVE JURISDICTION AND VENUE IN SUCH COURTS. The arbitrator's award shall be binding and may be entered as a judgment in any court of competent jurisdiction. To the fullest extent permitted by applicable law, no arbitration under this Agreement shall be joined to an arbitration involving any other party subject to this Agreement, whether through class arbitration proceedings or otherwise.

Severability: If any term or condition of this Agreement shall be deemed invalid, void, or for any reason unenforceable, that part shall be deemed severable and shall not affect the validity and enforceability of any remaining term or condition.

Amendment: Pandigital reserves the right to amend any of the terms of this Agreement at its sole discretion by posting the

revised terms on the Pandigital.net website. Your continued use of the Device and Software after the effective date of any such amendment shall be deemed your agreement to be bound by such amendment.

Contact Information: For communications concerning this Agreement, you may contact Pandigital by writing to Pandigital through the website: www.pandigital.net.

© 2011 Pandigital, Inc. or its affiliates. All rights reserved. Pandigital, the Pandigital logo, Pandigital Novel, are trademarks of Pandigital Inc. Barnes & Noble and certain other logos used herein are trademarks of Barnes & Noble, Inc. All rights reserved. Facebook and the “f” logo are registered trademarks of Facebook Inc. All rights reserved. Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Pandigital Novel contains Adobe® Reader® Mobile software under license from Adobe Systems Incorporated, Copyright © 1995-2009 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe Systems Incorporated.

Customer Support

For customer support, go to www.pandigital.net/support.