

Directory

1. Use statement.....	1
2. Appearance description.....	1
2.1 Overall structure.....	1
2.2 Buttons and plug-ins	2
3. The description of menu interface.....	2
3.1 Desktop description.....	2
3.2 Status bar description	3
4. Basic settings of equipment.....	3
4.1 Connecting to networks and devices	3
4.2 Accounts.....	3
4.3 WiFi setting	4
4.4 3G connection	6
4.5 Ethernet connection.....	6
4.6 The procedure of connecting the tablet with computer	7
4.7 Sound and display	8
4.8 Security	9
4.9 Date and time	10
4.10 Language and input.....	11
4.11 Battery charging	12
5. Software installation and management.....	13
5.1 Browser	13
5.2 E-mail.....	13
5.3 Google map	13
5.4 Alarm clock	14
5.5 HDMI digital output.....	15
5.6 File browser.....	16
6. FAQ.....	16
1.The method of firmware updating.....	16
2. Can not open the tablet.....	17
3. Headphones can not hear sound.....	17
4. Can not copy the file	17
5. Helpfile	17
6. Time synchronization	18
7. What type 3G usb Dongle works with this tablet?	18

1. Use statement

Statement: The company is committed to quality innovation and continual improvement of software. If the final version of products has any differences from the description of the user guide , please subject to the final product .Thank you.


2. Appearance description

2.1 Overall structure





2.2 Buttons and plug-ins

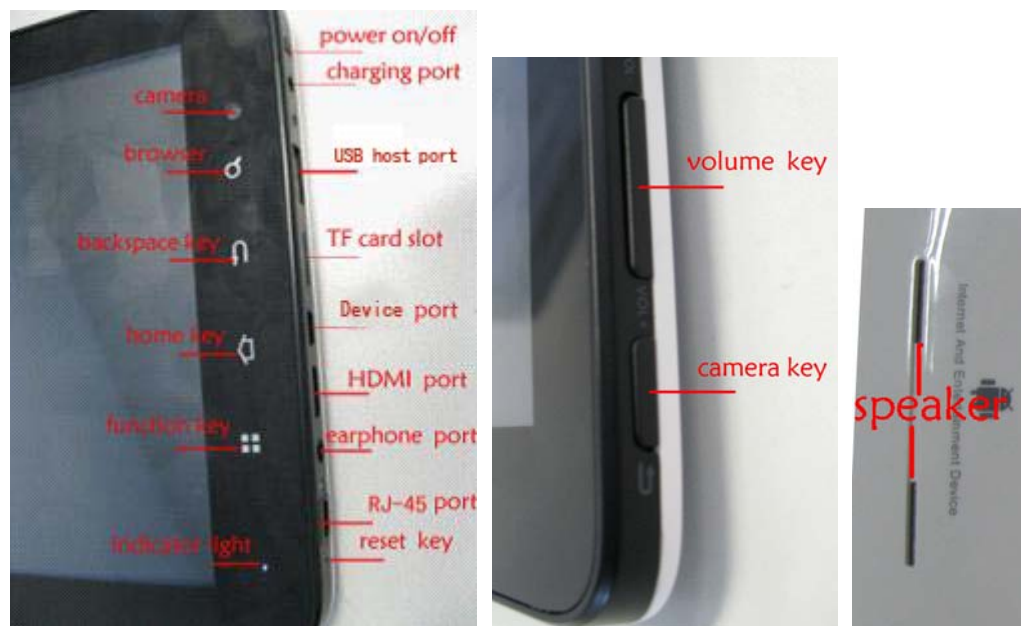


Note: if system halted, please insert one slender material into the reset key ,then system will shutdown.

insert an external charger, then charge lamp will turn on;


When charge is completed, charge lamp will turn off.

3. The description of menu interface

3.1 Desktop description

With touching the Launcher icon"", you can enter menu and choose the

options you need, such as email ,settings and so on.

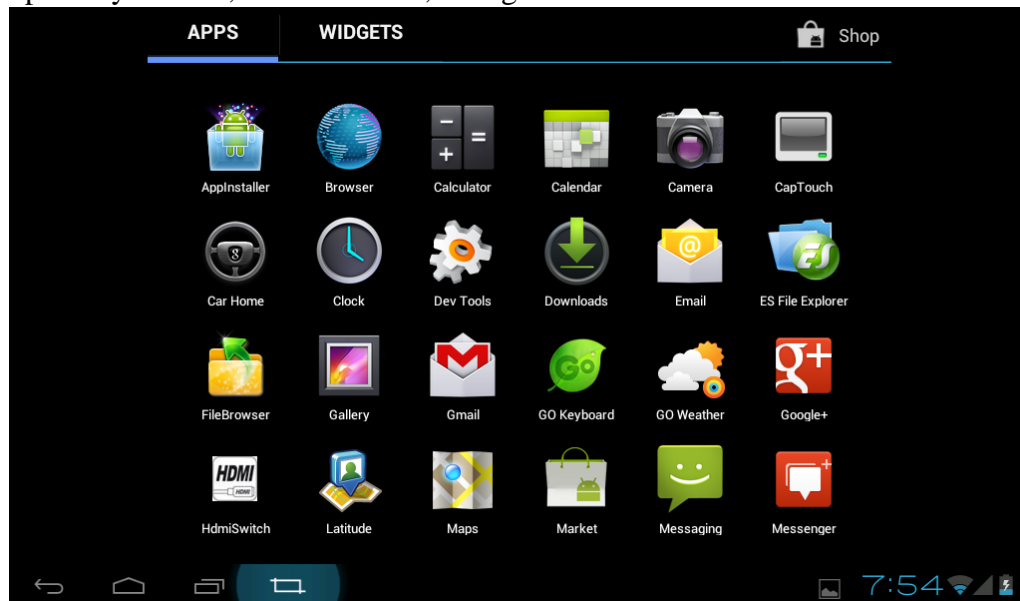

3.2 Status bar description

The status bar is located on the bottom of screen



On the bottom, it shows the followings from right to left: residual battery, 3G signal, WiFi signal, the current time,screenshot, the running processes, home key, and backspace key.

4. Basic settings of equipment.

4.1 Connecting to networks and devices

Your tablet can connect to a variety of networks and devices, including Wired networks,Wi-Fi data networks,3G networks and Bluetooth devices. You can also connect your tablet to a computer, to transfer files from your tablet, and share your tablet's mobile data connection via USB or as a portable Wi-Fi hotspot.

You can configure how your tablet connects to Internet and WiFi networks, to Bluetooth devices, and to a computer,share your tablet's mobile data connection via USB or as a portable Wi-Fi hotspot. You can also secure your connections to virtual private networks (VPNs) and other networks.

4.2 Accounts

When you first turn on your tablet, you have the opportunity to sign into your Google Account. Then it's a good idea to become familiar with the basics of your tablet and how to use it—the Home screen, the touchscreen, menus, applications, entering text, and so on.

Starting Android the first time, signing into your Google™ Accounts so you can take

full advantage of Google Apps™, and performing basic Android tasks.

You can sync contacts, email, calendar events, and other information with your tablet from multiple Google Accounts, Microsoft Exchange ActiveSync accounts, or other kinds of accounts.

You can configure how your account interacts with the applications on your tablet using the Account & Sync settings and the settings in Gmail, Calendar, Email, and other applications. Use a web browser to change your password and other general account settings.


To add some accounts, you may need to obtain details from an IT support representative about the service to which the account connects. For example, you may need to know the account's domain or server address.


Add an account:

- (1) Open the Accounts & Sync Settings screen.
- (2) Touch Add account.
- (3) Touch the kind of account to add.
- (4) Follow the onscreen steps to enter the required and optional information about the account.
- (5) Configure the account.


4.3 WiFi setting




Touch the setting icon “” in the menu page to enter into set-up interface.

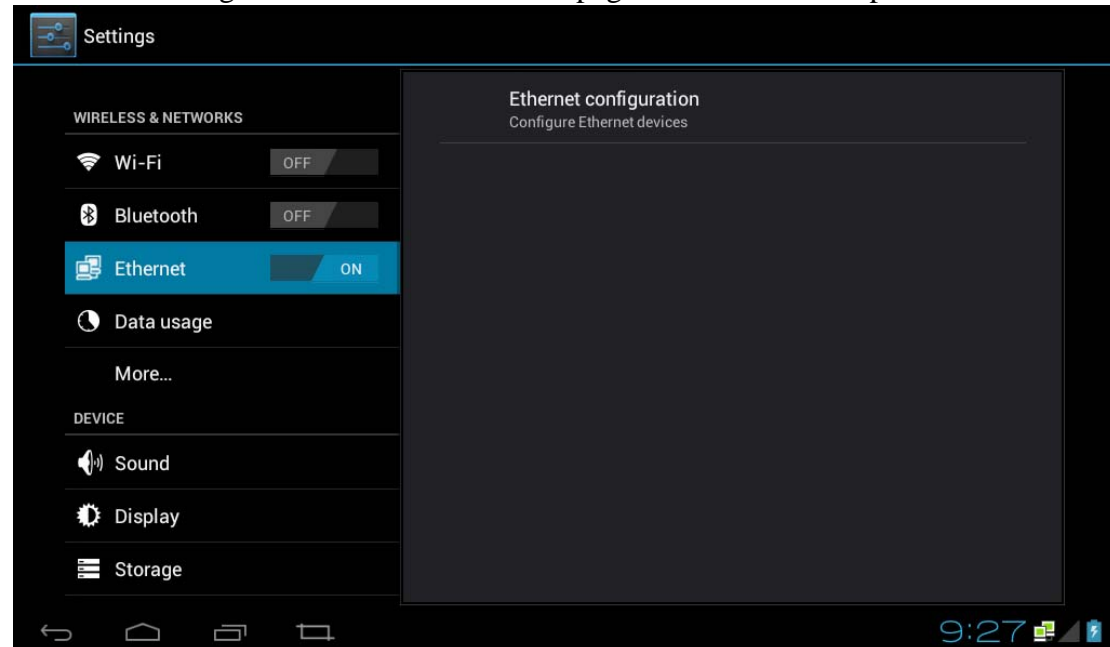


When The WiFi icon showed on the right is “”, it means that WiFi is in the state of closed.

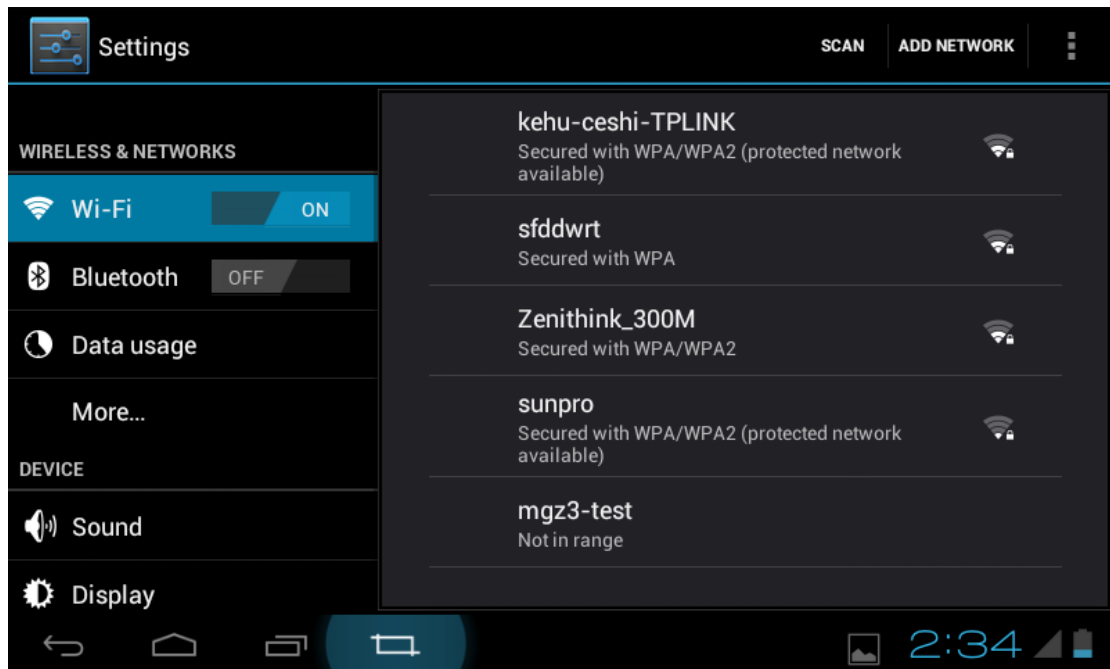


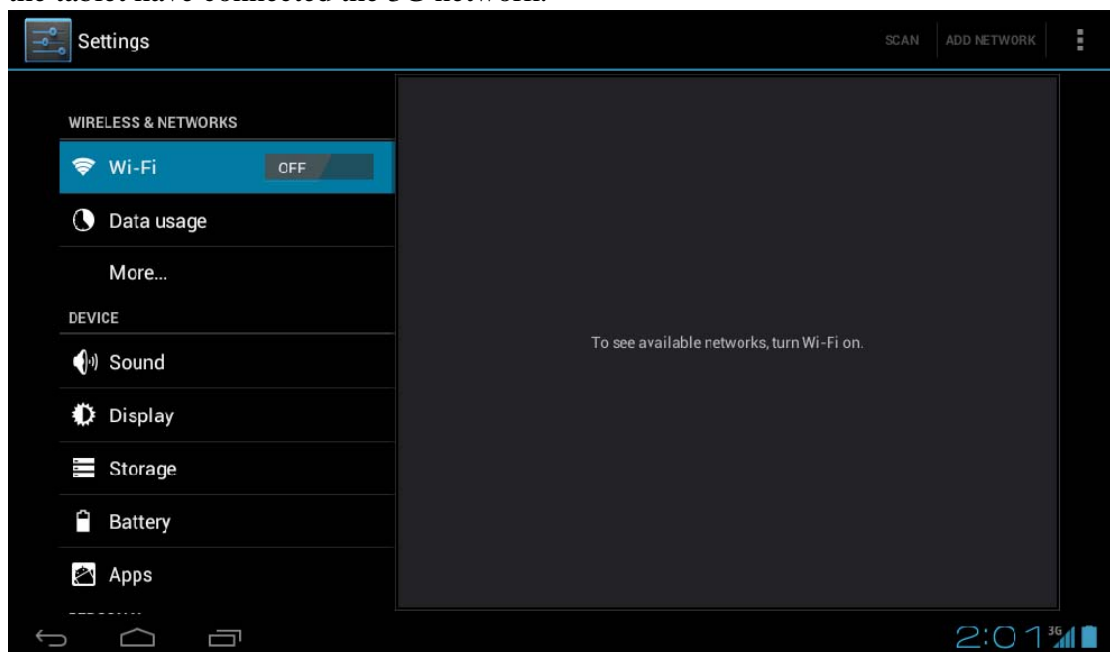
Touch WiFi, When the right icon shows “ON”, it means device is scanning the network that is available. The device will search automatically and add the nearby WiFi network which can be connected. touch wireless Access Point and then you can connect network.

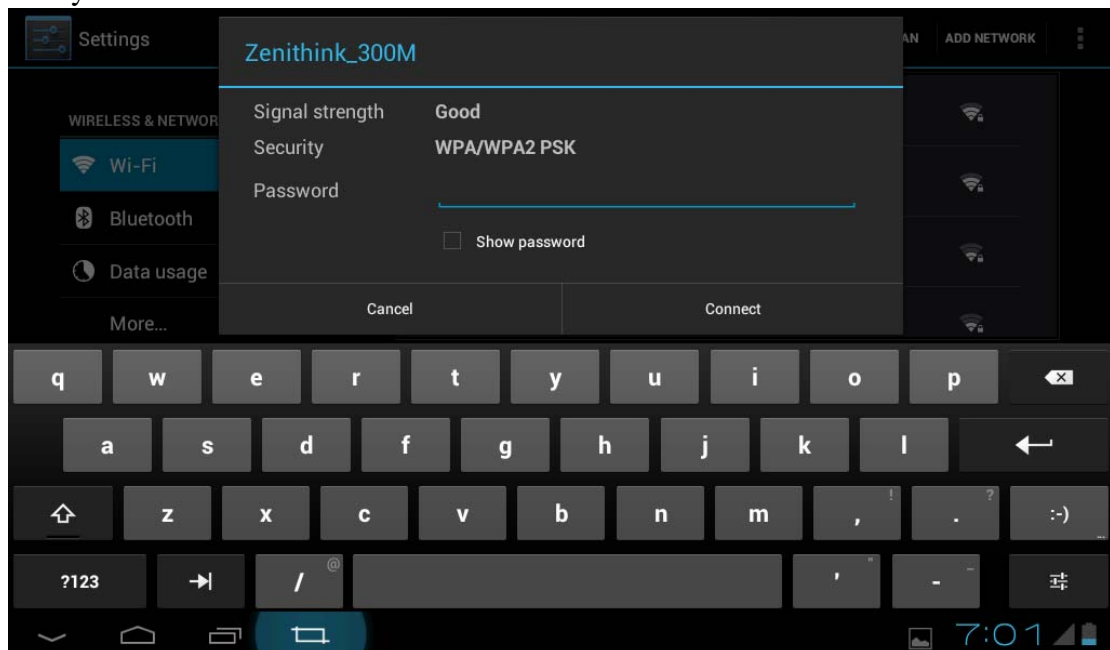

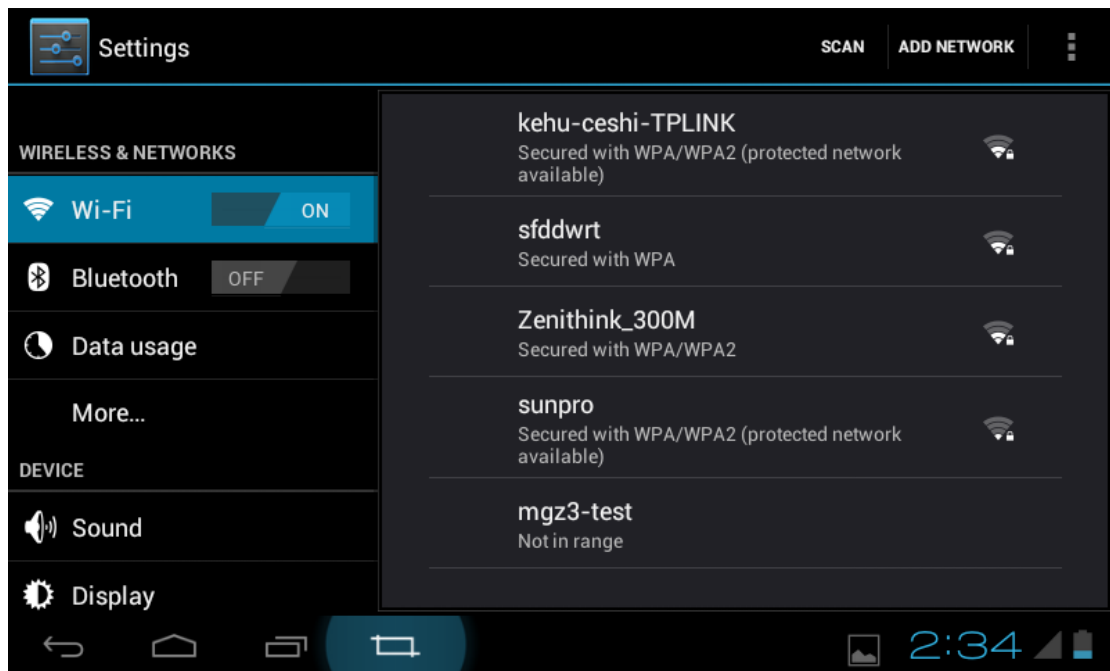


4.4 3G connection


Turn off the WiFi, connect the USB 3G module. When the triangle icon on the bottom--right corner turn green, and it shows "3G", see as the picture , it means the tablet have connected the 3G network.



4.5 Ethernet connection


Turn off the WiFi, touch "Ethernet" to wired network on , connect to the tablet

through RJ-45 cable. When it shows the icon “”on the lower right, you’ve succeeded in connecting to internet.

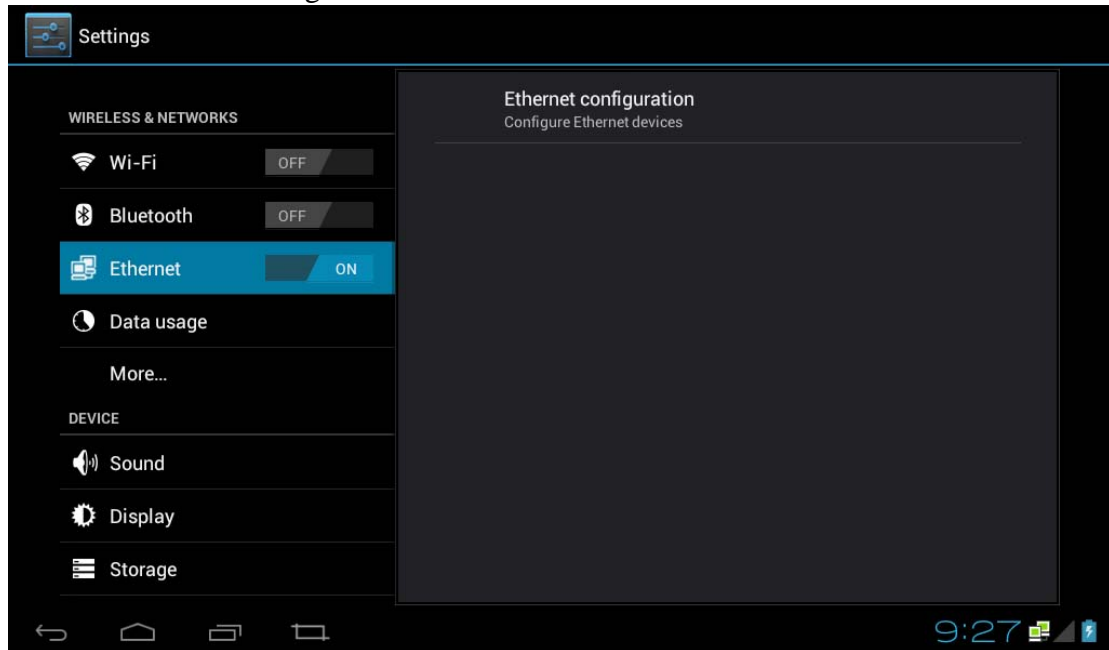


4.6 The procedure of connecting the tablet with computer

--- Use the mini-USB cable connect the tablet and computer.

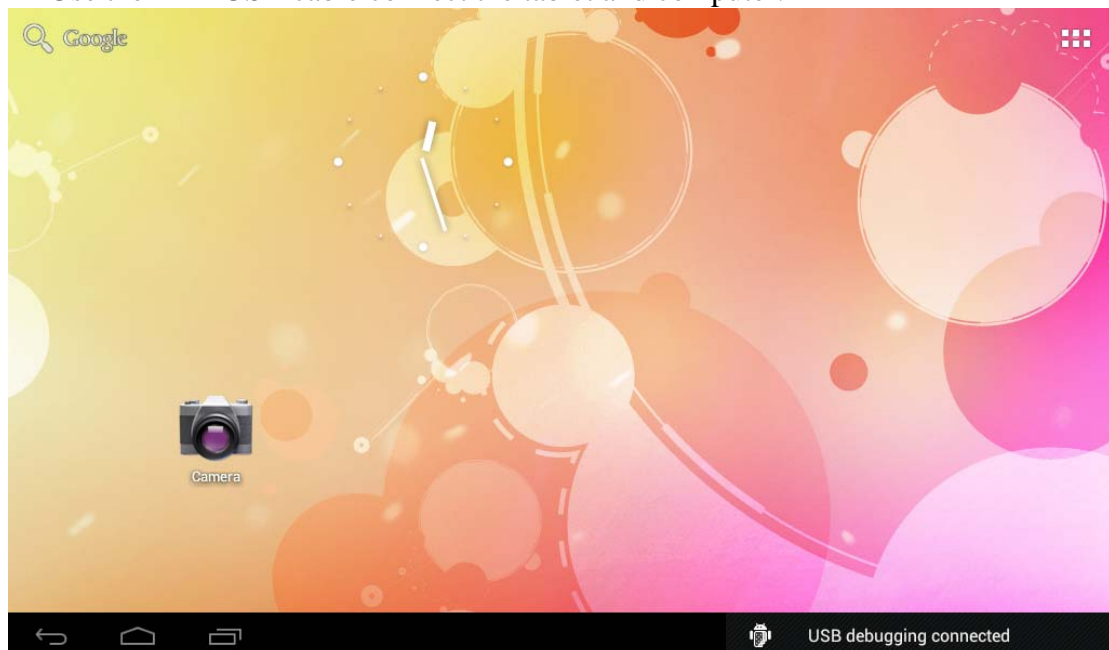


----When the USB icon appear on tablet screen bottom ,touch it,then touch "turn on USB storage", it has been OK. Then,you can copy files to or from tablet,or use ADB debugging tools.

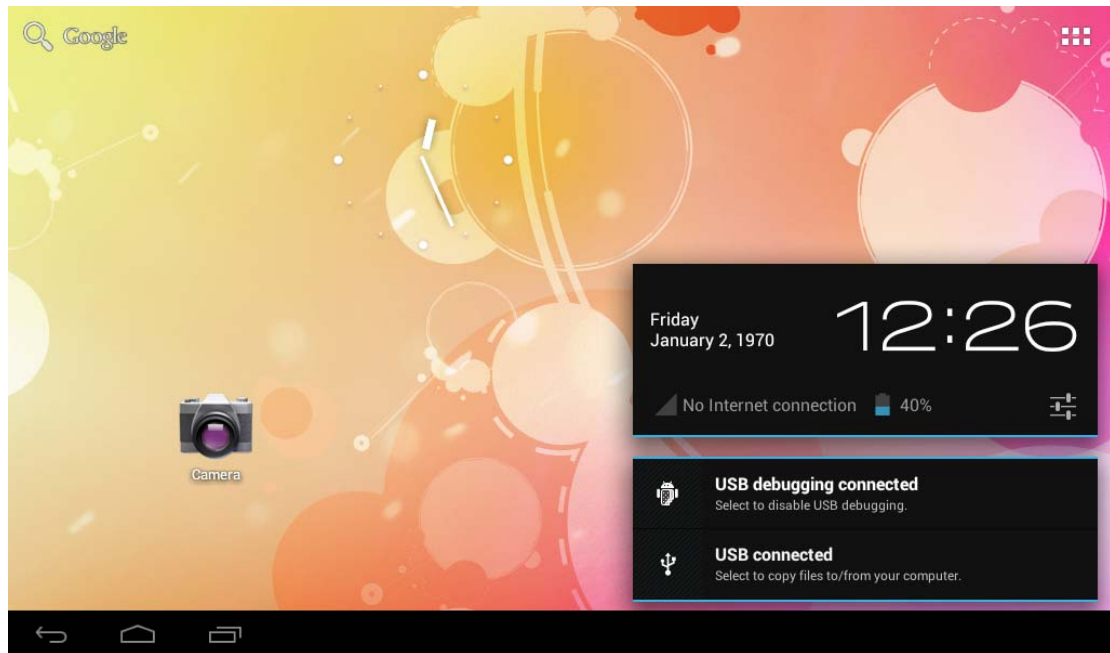

4.7 Sound and display


The Volume of media: Adjust the volume of media by dragging the move point to right or left.

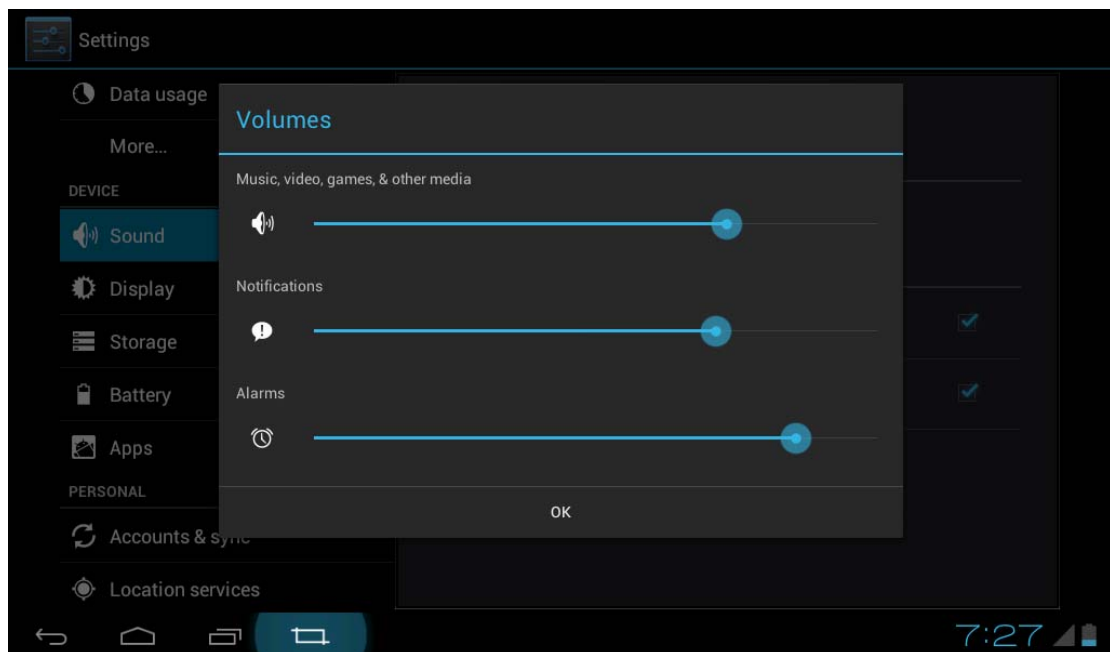

G-sensor: It will change the direction automatically when you rotate the tablet.

Wallpaper: Users can set the wallpapers which they like.

Brightness: Adjust the brightness of screen by dragging the point to the right or left.

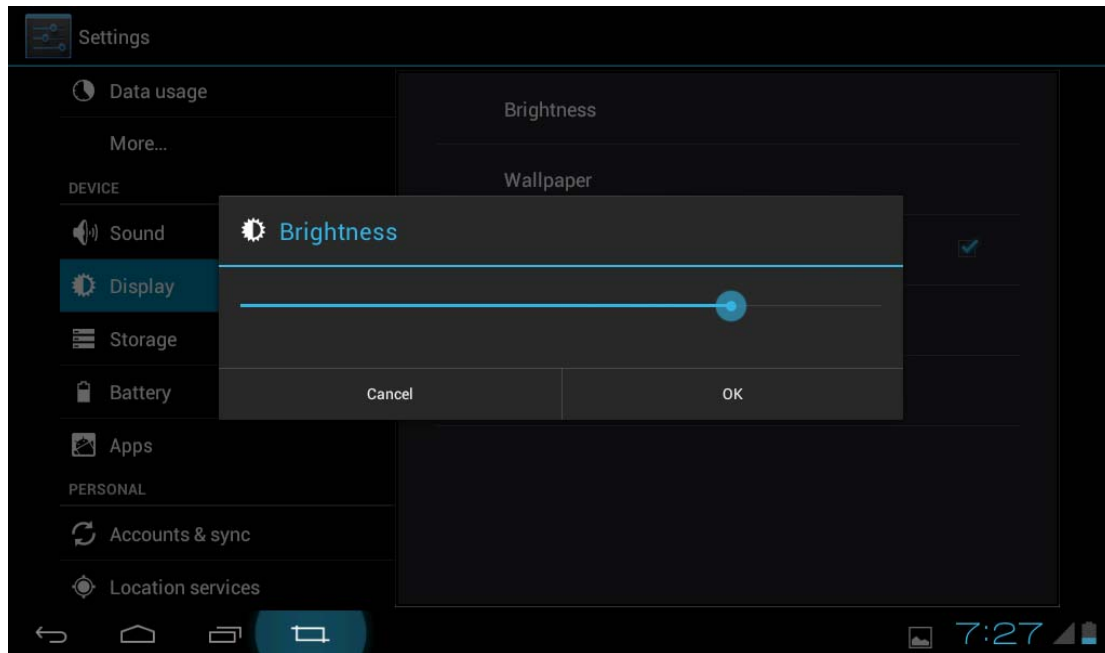

Sleep: There are eight kinds of time interval for your choose for idle screen: 15 seconds,30 seconds,1 minutes,2 minutes, 5 minutes ,10 minutes,30 minutes and never timeout.


4.8 Security

Screen lock: there are several different choices to choose, such as slide , face unlock ,password and so on.

Owner information: end user can type owner info to make the tablet show tablet owner info on lock screen.


Encrypt tablet: end user can encrypt his accounts to protect his personal info.

Make passwords visible: end user can see the passwords when typing them.

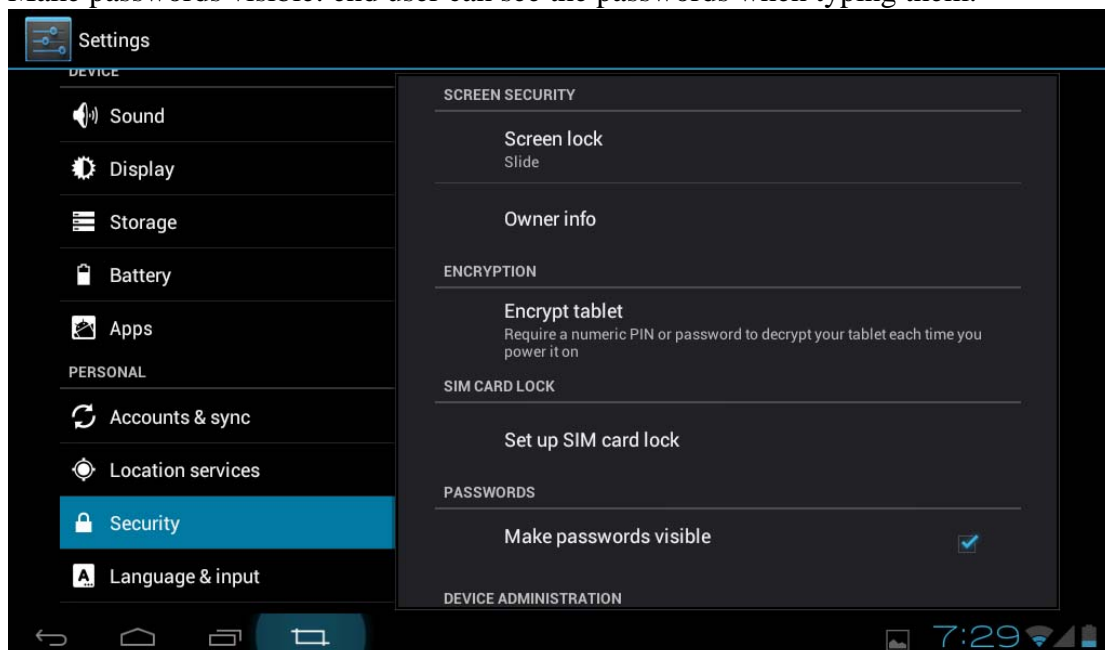


4.9 Date and time


Date and time: set up date, time, time zone and format.

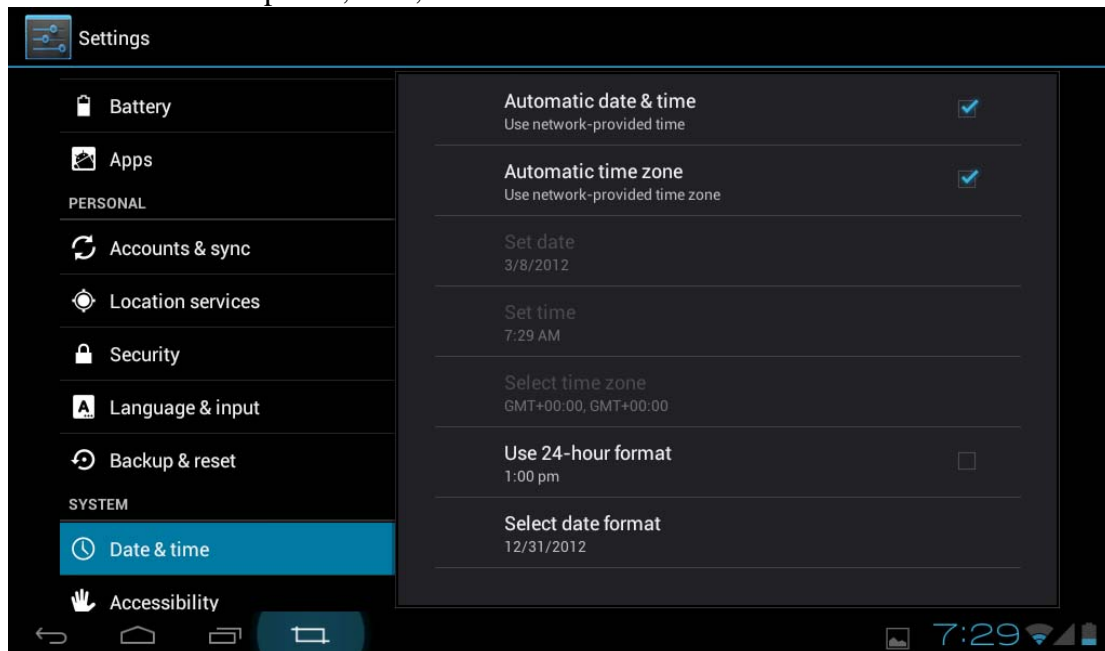

Set up date and time: enter the interface of date setting to set up the date and time.

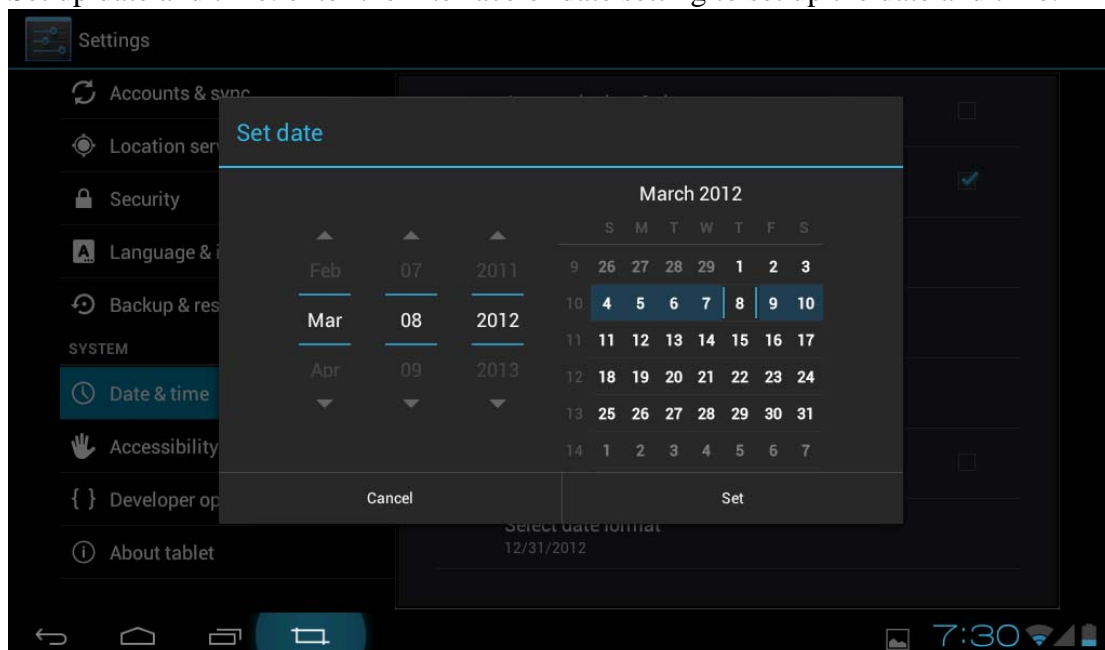


Select time zone: enter the interface of time zone to set up the time zone.

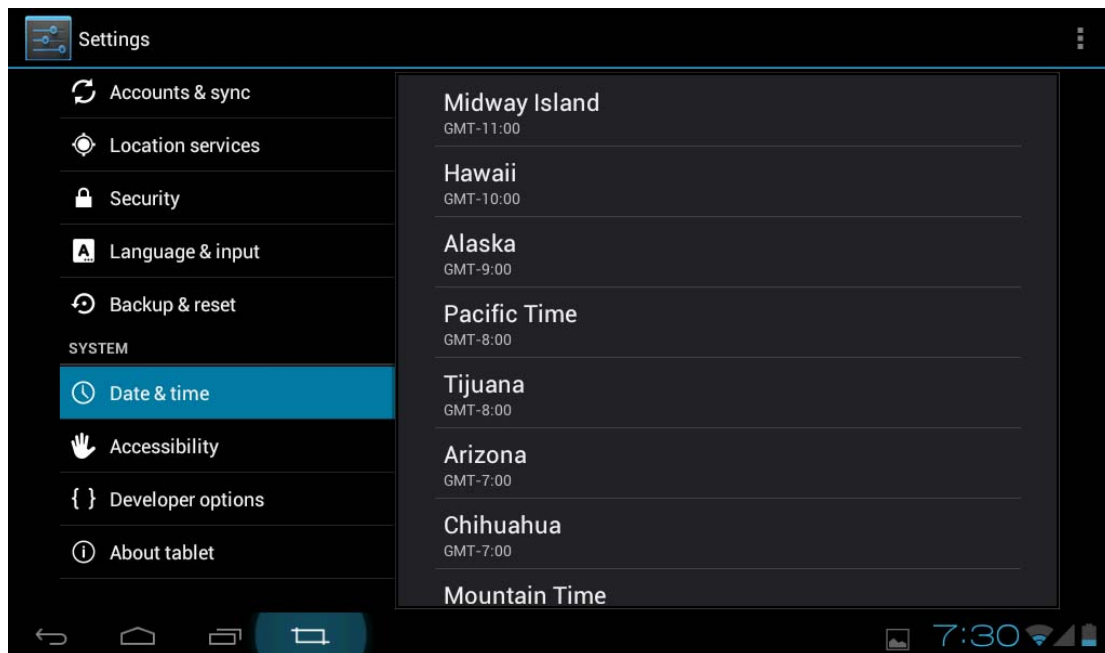

Set up time format: set up the display format of time.



Choose date format: Choose different display format of date.

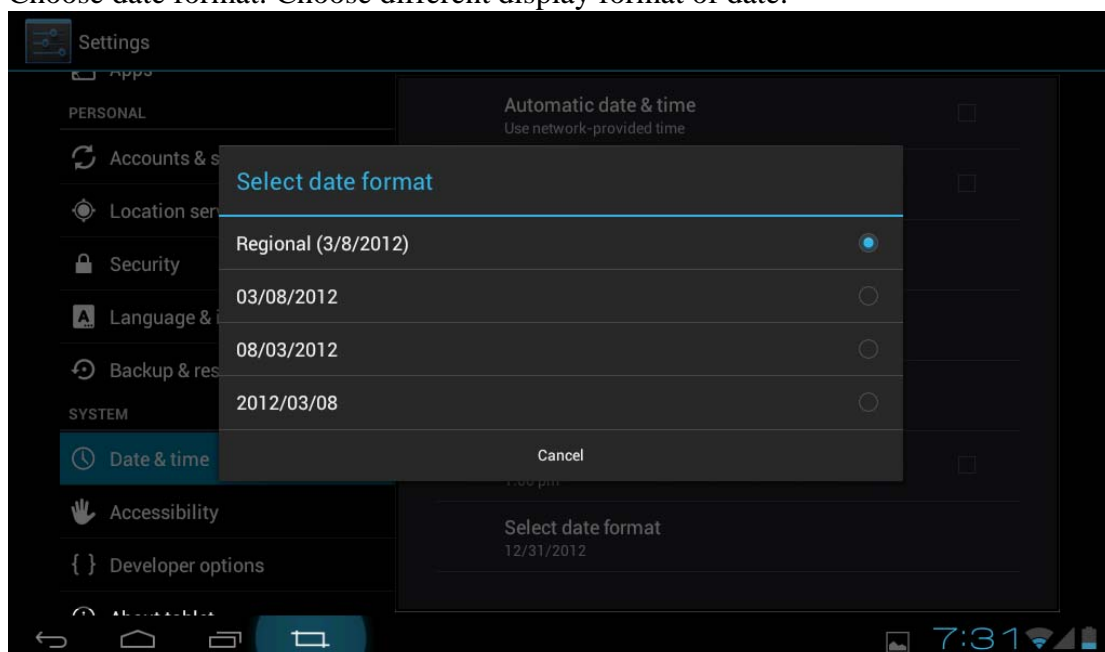

4.10 Language and input

Set up the locale (language and area), text entry and automatic error correction.

Select area: There are many kinds of language to choose.

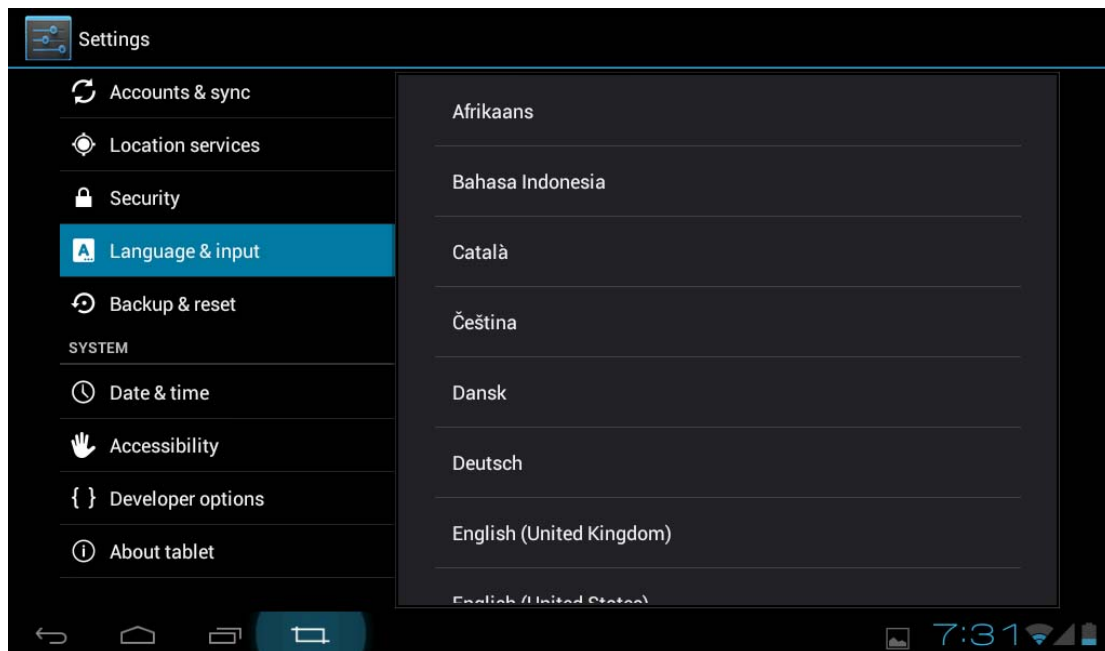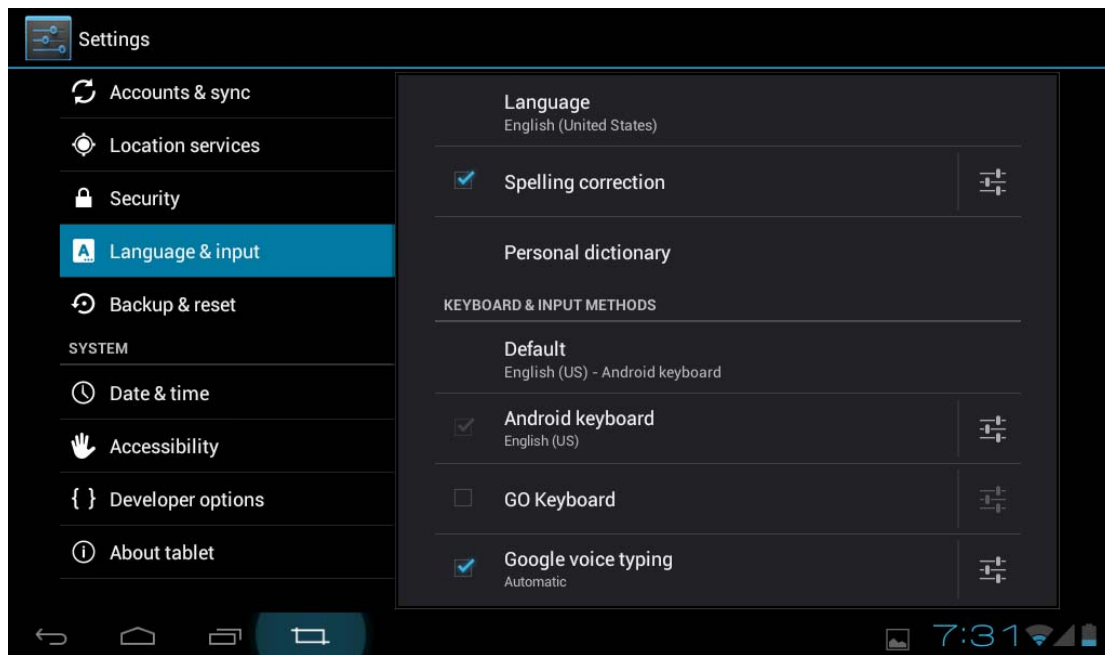

4.11 Battery charging

There is a built-in battery, when the battery level is low, the system will recommend you to charge.

Way of charging: One end of the adaptor connected to power socket, the other end connected to the power port of the tablet

<1> When the indicator light of battery charging turns red, it means tablet is charging. when green light is on, it means the tablet is running.

 
When the indicator light goes out, It means battery is fully charged.

<2> During the charging period, user can still use the tablet.

5. Software installation and management

5.1 Browser




Touch the Browser icon "  ",it open the following web page.
Start: enter website by inputting web address.



5.2 E-mail




Touch the E-mail icon"  " and enter the e-mail.You use the Email application to read and send email from services other than Gmail. Email includes a wizard that makes it easy to configure it for several popular email service providers.

5.3 Google map



Touch the Google map icon "  " and enter Google Map.

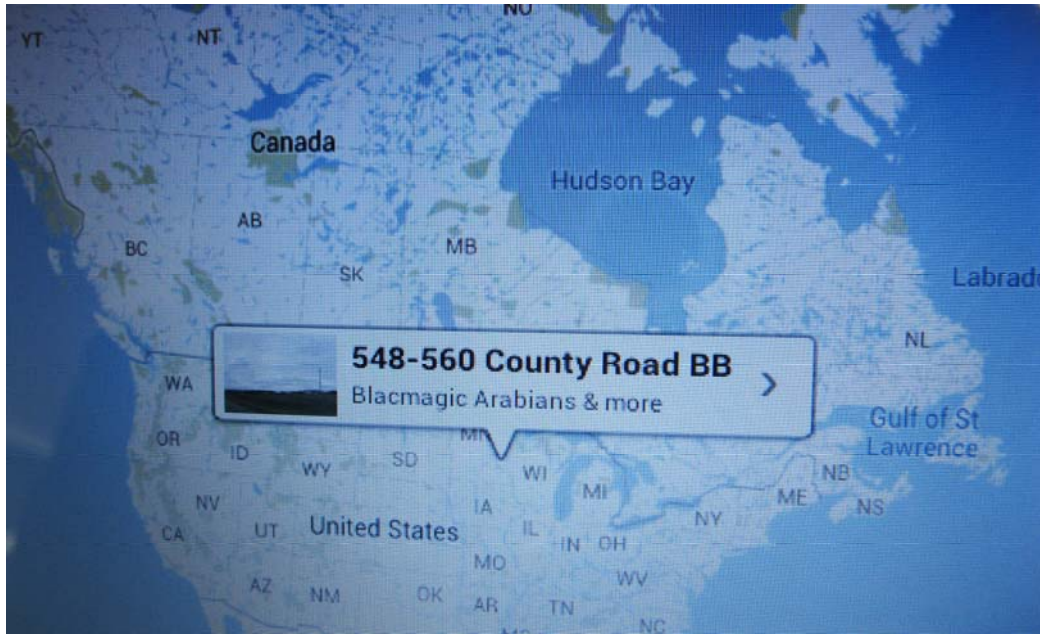

--Touch screen to zoom in and zoom out images

--Drag touch screen, move the image up-and-down and right-and-left

Touch Menu :


--Search: search nearby restaurants attractions and so on


--Direction: search drive circuit by entering starting and finishing address.

--Layers: there are traffic, satellite, terrain, transit lines, latitude ,my maps, Wikipedia modes to choose.


--My place: Find out my current location by setting up "My Location".

5.4 Alarm clock

Touch the icon “” and enter the alarm clock settings, then touch “alarm set”, then end users can set the time they want, and there are many different ringtones to choose .

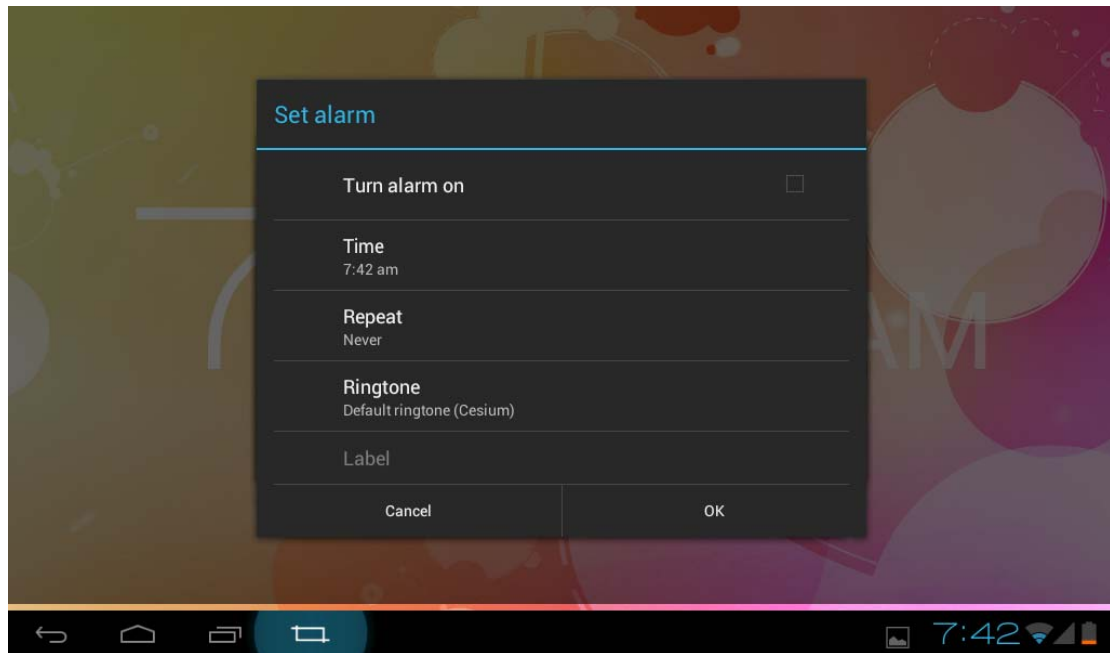


Touch “Add alarm”, customers could add any alarms they like.

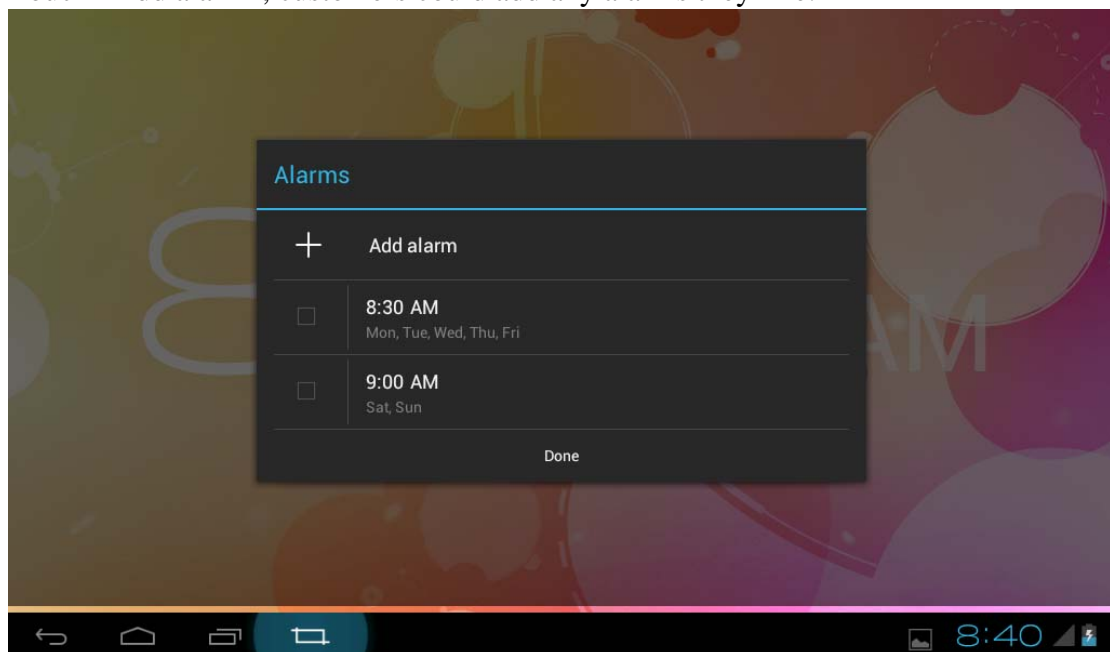


5.5 HDMI digital output

Use the mini-HDMI cable to connect the tablet with TV.




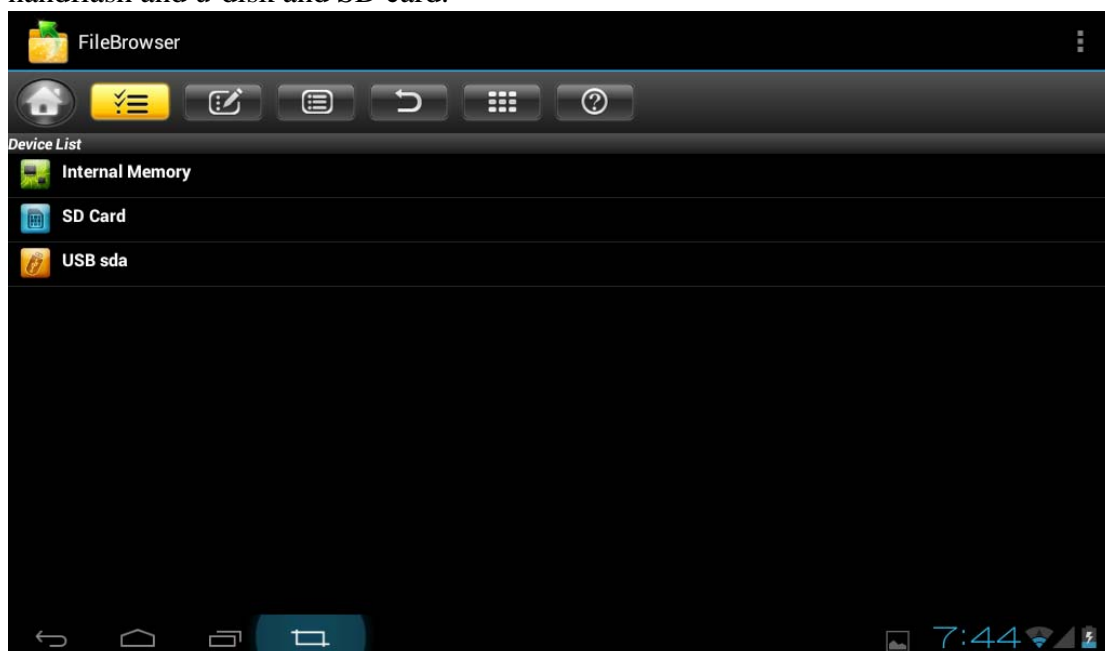
Touch the HDMI switch “”, then choose one between them: HDMI 720P or HDMI 1080P.

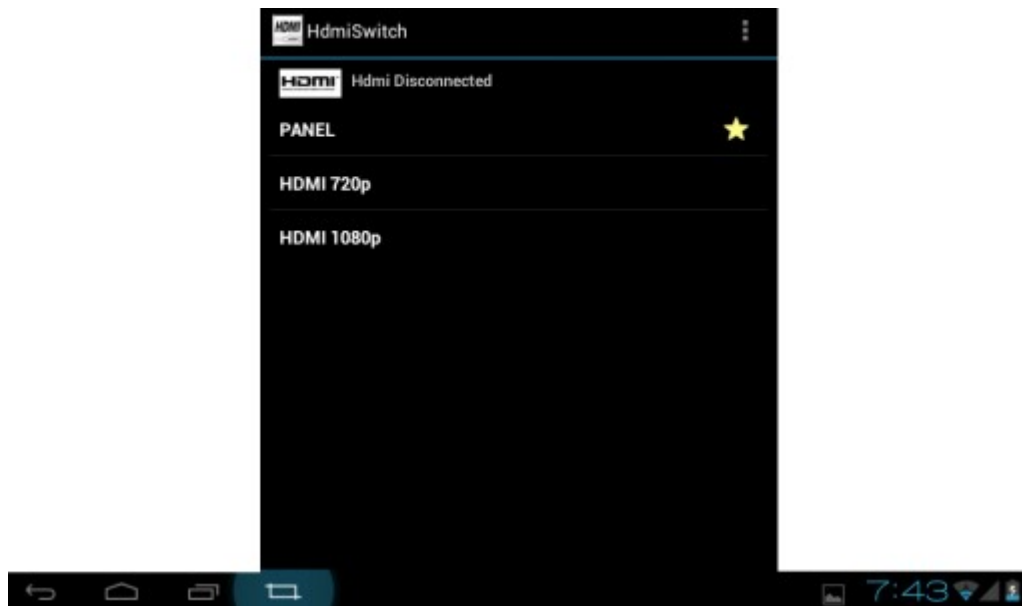

Then you can see the computer screen on TV screen.

5.6 File browser

Touch the icon “” and enter File browser, you can browse the files in the nandflash and u-disk and SD card.



Touch the edit key to cut or copy or paste or delete files.

6. FAQ

1.The method of firmware updating

-- First extract the firmware which you get or download, then copy the whole

"zt-update" directory into the root directory of TF card.

-- Put the TF card into TF card slot, then press the "Camera" button at the same time to press the power-on button, then operate as per the reminders shown on the screen, the tablet will be installed the firmware and then reboot.

Note: keep charged when the tablet is being installed the firmware.

2. Can not open the tablet

--Check battery.

--Connect the power adapter and then check again.

--If it is still cannot be opened, please contact our sales person.

3. Headphones can not hear sound

--Please check whether the volume has been set to 0

--Please check whether the music file has been damaged. Try playing other music to determine. If the file has been damaged, it could lead to serious noise or skips.


4. Can not copy the file

--Confirm whether the computer and the tablet is properly connected

--Confirm whether the storage space is full.


5. Helpfile

Enter into FileBrowser, then touch file named "Help.pdf" file, as the picture shows below:

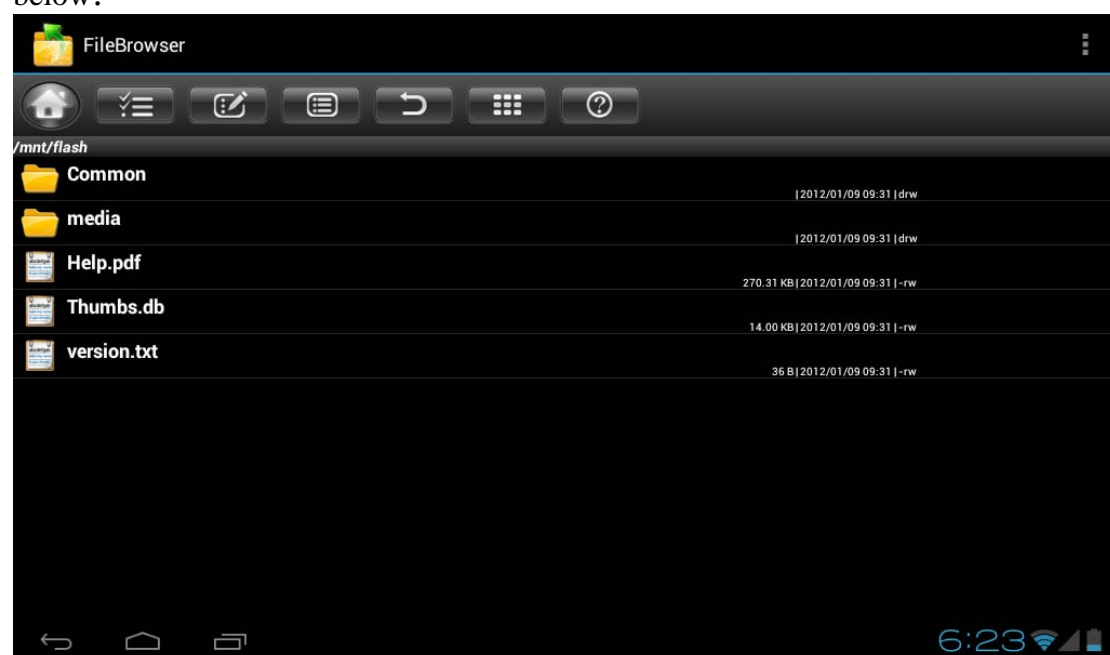

You can see the helpfile, inside there are some common solutions and guidance, as the

picture shows below:

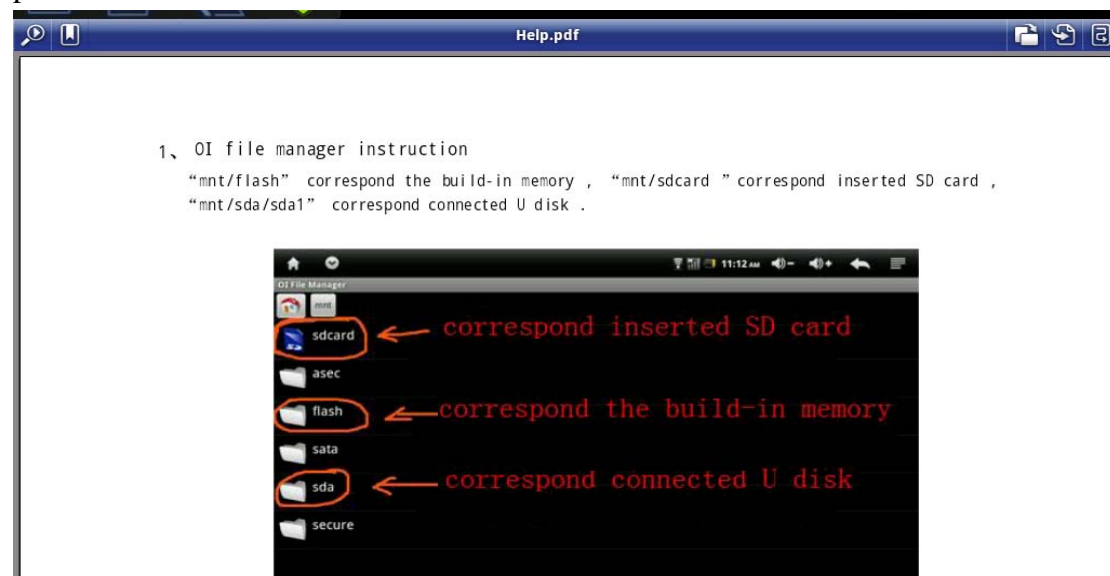

6. Time synchronization

When users get the tablet, please set the time zone corresponding to the local time, or users can not download the softwares from the google market.

7. What type 3G usb Dongle works with this tablet?

Name	manufacturer	type	standard
AD3812	ZTE	WCDMA	PCIE Module
U6300	Longcheer	WCDMA	PCIE Module
EM770W	Huawei	WCDMA	PCIE Module
EM660	Huawei	CDMA2000	PCIE Module
MF210	ZTE	WCDMA	PCIE Module
E1750	Huawei	WCDMA	Usb Dongle
E1820	Huawei	WCDMA	Usb Dongle
E173-u	Huawei	WCDMA	Usb Dongle
EC1261	Huawei	CDMA2000	Usb Dongle
EC122	Huawei	CDMA2000	Usb Dongle
E220	Huawei	WCDMA	Usb Dongle
E173-s	Huawei	WCDMA	Usb Dongle
MF633	ZTE	WCDMA	Usb Dongle
MF110	ZTE	WCDMA	Usb Dongle
MF637U	ZTE	WCDMA	Usb Dongle
MF190	ZTE	WCDMA	Usb Dongle
EC150	Huawei	CDMA2000	Usb Dongle
E261	Huawei	WCDMA	Usb Dongle

E1550	Huawei	WCDMA	Usb Dongle
MF226	ZTE	WCDMA	Usb Dongle
WH700G	siruibo	WCDMA	PCIE Module
MC2716	ZTE	CDMA2000	PCIE Module
K3770	Huawei(Vodafone)	WCDMA	Usb Dongle
ET188	Huawei	TD-SCDMA	Usb Dongle
ET128	Huawei	TD-SCDMA	Usb Dongle
ST-Ericsson TD CMCC Modem	ST-Ericsson	TD-SCDMA	Usb Dongle
ZTE-T A355	ZTE	TD-SCDMA	Usb Dongle
ZTE-T A356	ZTE	TD-SCDMA	Usb Dongle
A-Link 3GU	A-LINK	WCDMA	Usb Dongle
MI900	ThinkWill	WCDMA	PCIE Module
MU509	Huawei	WCDMA	LGA
MT509	Huawei	TD-SCDMA	LGA

Note:

- (1) We support most of Huawei in source code, but only some of them have been tested and list in the table.
- (2) We support more 3g modem in source code, but only some of them have been tested and list in the table.